



## CONDENSING FANNED FLUE BOILER CSI PRIMARY

NATURAL GAS (G 20) (I 2H)

G.C. N° 41 581 05 CSI

LPG (G 30 - G 31) (I 3+)


G.C. N° 41 581 06 CSI

**Tested, certified and  
service listed**



**Listed by The United Kingdom Water  
Fitting Byelaws Scheme**

CE 0087

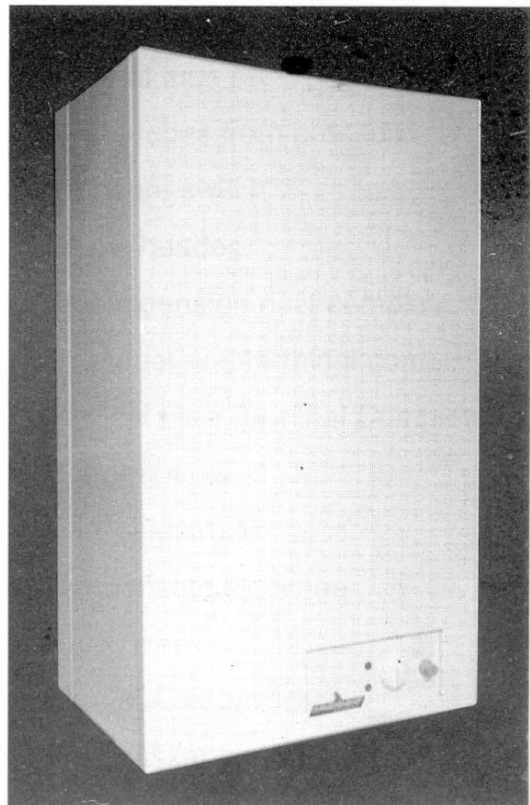

## INSTALLATION AND SERVICING INSTRUCTIONS TO BE LEFT WITH USER



*The code of practice for the installation,  
commissioning & servicing of central heating systems*

Technical and illustrative data are not binding and can be modified without prior notice.  
The descriptions and illustrations in the present booklet are for guideline purposes only.

RAVENHEAT MANUFACTURING LTD., CHARTISTS WAY, MORLEY, LEEDS, LS27 9ET. - TELEPHONE (0113) 252 7007

## **CONDENSING SYSTEM INNOVATION CENTRAL HEATING BOILER**

This new super high efficient boiler is designed to meet heating requirements at super high efficiency, unheard of only a few years ago.

### **POSITION**

The appliance is extremely versatile as it can be fitted in almost any room. The appliance is room sealed, there is no contact between combustion chamber and living accommodation. This guarantees maximum safety and efficiency. Indeed, our depression/combustion front cover has been designed to fit, achieving maximum air tight seal using screw down fasteners at 15 cm. This should not hinder service of the appliance, but does ensure maximum efficiency and safety something which Ravenheat take great pride in.

Each boiler has been designed and manufactured in our modern plant to exacting ISO 9001 discipline, all boilers carry full CE marking of approval. Technical sales and commercial service are available throughout the UK. This product is guaranteed by Ravenheat Manufacturing, Chartists Way, Morley, LEEDS, LS27 9ET. Telephone No (0113) 252 7007.

### **BASIC COMPONENTS - (See figure 1)**

Guarantee is a full 12 months from date of purchase providing the appliance has been fitted in accordance with these instructions and relevant codes of practice.

---

### **MAJOR COMPONENTS**

---

Gas valve.

Main burner with flame stabiliser designed to operate under all thermal conditions.

Primary heat exchanger constructed from copper.

Unique **patented condensing heat exchanger** for high thermal flue transfer gases to water

Aesthetically pleasing panels and controls.

On/Off ball valve for shutting off gas.

Programmable 7 day module with digital display (optional).

**NOTE: Due to the high efficiency of this boiler a plume of water vapour will form at the flue terminal during operation.**

## **COSHH - CONTROL OF SUBSTANCES HARMFUL TO HEALTH IMPORTANT**

This appliance contains materials that are indicated below.

It is the Users/Installers responsibility to ensure that the necessary personal protective clothing is worn when handling, where applicable, the pertinent parts that contain any materials that could be interpreted as being injurious to health and safety.

**WARNING** When installing the appliance, care should be taken to avoid any possibility of injury when handling sheet metal parts.

### **GENERAL INFORMATION:**

**GLUES AND SEALANTS** - exercise caution - if these are still in liquid form.

**INSULATION PADS, CERAMIC FIBRE** - may be harmful if inhaled, may be irritating to skin, eyes, nose and throat.

When handling keep dust generation to a minimum, avoid inhaling and contact with skin or eyes.

When disposing of the product keep dust generation to a minimum and ensure that parts are securely wrapped.

When servicing avoid inhalation by using a vacuum cleaner or in conjunction with other tools.

After handling wash hands and other exposed parts.

**RAVENHEAT** use only high quality material for production of this product, in an effort to protect the environment components should be re-cycled.

TABLE OF CONTENTS

SECTIONS:		PAGE:
1	INTRODUCTION	6
2	DESIGN PRINCIPLES AND OPERATING SEQUENCE	6
3	TECHNICAL DATA	8 - 9
4	GENERAL REQUIREMENTS	6
5	INSTALLATION	15
6	COMMISSIONING	26
7	SERVICING INSTRUCTIONS	30
8	FAULT FINDING	39
9	ELECTRICAL SYSTEM DIAGRAM	40
10	EXPLODED PARTS DIAGRAM	45
11	LIST OF SPARE PARTS	46

GENERAL LAYOUT

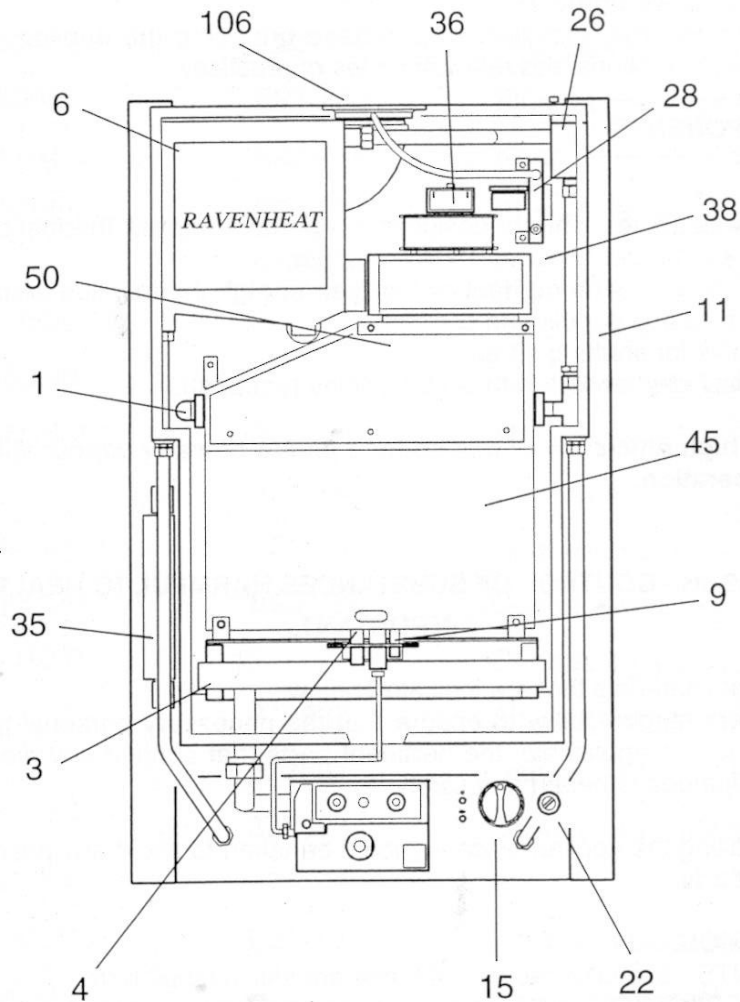


Fig. 1

KEY

- |                               |                                  |                             |
|-------------------------------|----------------------------------|-----------------------------|
| 1 - Heat exchanger            | 15 - Heat control thermostat     | 38 - Sealed chamber         |
| 3 - Burner                    | 22 - Overheat cut off thermostat | 45 - Combustion chamber     |
| 4 - Ignition pilot burner     | 26 - Auto air vent valve         | 50 - Flue gas exhaust hood  |
| 6 - Condensing heat exchanger | 28 - Pressure switch             | 106 - Flue restriction ring |
| 9 - Ignition electrode        | 35 - Condensing trap             |                             |
| 11 - Frame                    | 36 - Fan                         |                             |

# OPERATING SCHEME

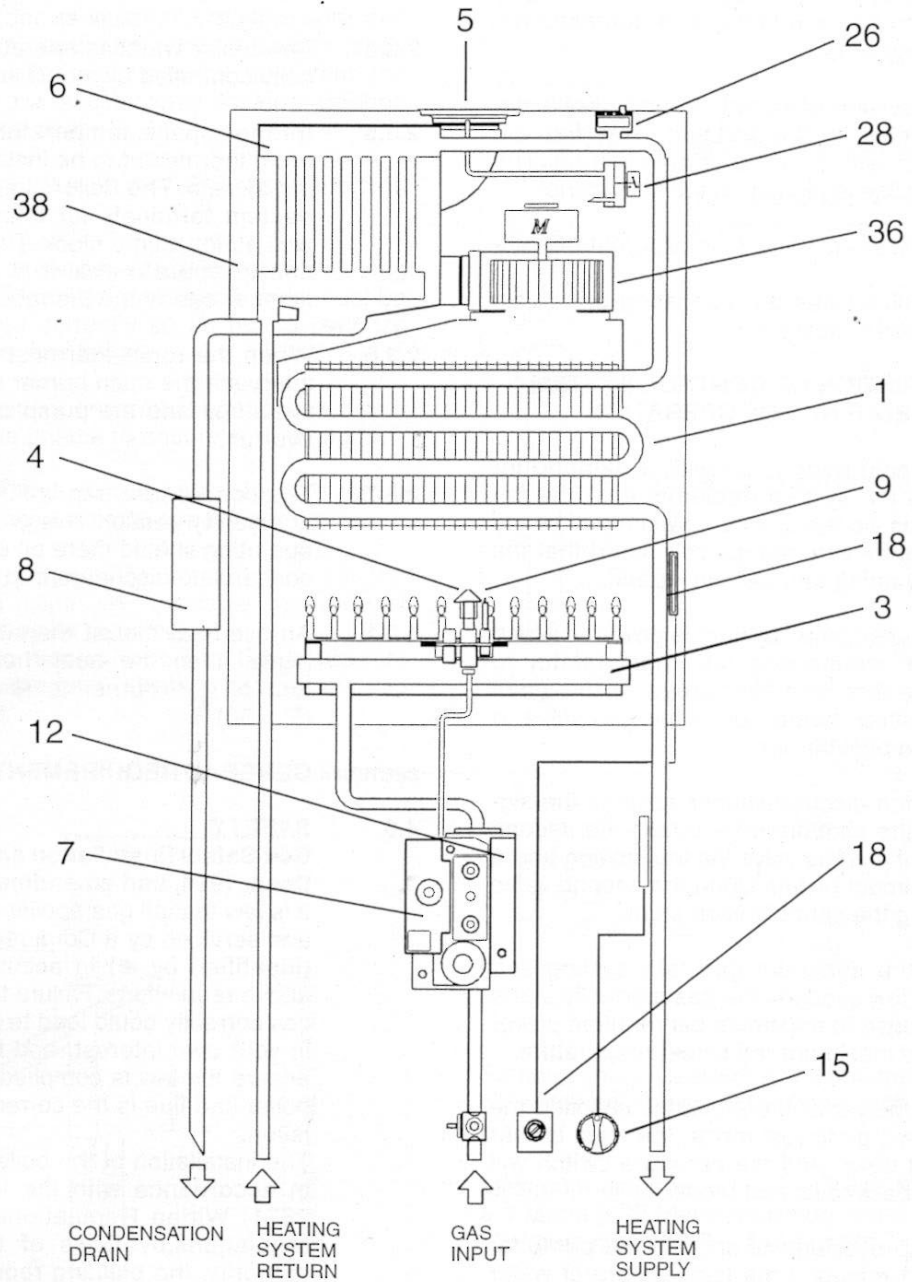


Fig. 2

## KEY

- |                               |                              |                                  |
|-------------------------------|------------------------------|----------------------------------|
| 1 - Heat exchanger            | 7 - Electronic ignition      | 18 - Overheat cut-off thermostat |
| 3 - Burner                    | 8 - Condensing trap          | 26 - Auto air vent valve         |
| 4 - Ignition pilot burner     | 9 - Ignition electrode       | 28 - Pressure switch             |
| 5 - Flue restriction ring     | 12 - Gas valve               | 36 - Fan                         |
| 6 - Condensing heat exchanger | 15 - Heat control thermostat | 38 - Sealed chamber              |

## SECTION 1 INTRODUCTION

- 1.1 The CSI Primary is a gas fired room sealed fan assisted condensing heating boiler suitable for fully pumped open vented or sealed system central heating and domestic hot water systems.
- 1.2 The provision of stored domestic hot water is possible by the addition of an indirect cylinder with 'Y' or 'S' plan controls. The data badge is placed on the front panel.
- 1.2.1 Fig. 1 illustrates the general layout of components.  
Fig. 2 illustrates the operating principals described in section 2.

## SECTION 2 DESCRIPTION OF CONTROL SYSTEM AND SEQUENCE OF OPERATION

- 2.1 If the main neon is on with a demand for heat to the system (radiators etc.) the fan operates via the pressure switch and sends a signal back to the ignition board that the fan is running at maximum speed.
- 2.2 The spark ignition system is powered which in turn commences the spark ignitor to operate and light the burner. At this point the ignition board opens the gas valve to light the pilot/burner.
- 2.2.1 When the electrode/senor sensors the signal of the pilot/burner it opens the second stage of the gas valve via the ignition board on minimum power. Upon the second valve opening the spark ignition stops.
- 2.2.2 From the minimum gas rate setting and after a few seconds the gas gradually starts to increase to maximum set required power until it's maximum regulated temperature.
- 2.2.3 When the boiler thermostat is satisfied the boiler will go to rest mode, the main burner is shut down and the pressure switch will return back to its rest mode.
- 2.2.4 A pump overrun will operate the pump for about 1 minute if the temperature of water in the boiler is above 78 °C, after this water is dispersed the pump will stop.
- 2.2.5 The boiler is fitted with a thermostatic anti-cycle device, this delays the boiler from refiring until the return water temperature is reduced.

## 2.3 GENERAL FUNCTION


- 2.3.1 The gas valve boiler output settings may be adjusted to requirements other than factory settings.
- 2.3.2 Air is drawn by the fan for combustion.

- 2.3.3 The fan also forces exhaust gas through the flue to the outside, this creates a lesser pressure in the sealed combustion chamber, thus sucking in combustion air through the inlet duct.
- 2.3.4 The boiler water temperature is automatically controlled by a built in thermostat.
- 2.3.5 Interior space temperature is set by the room thermostat to be installed in the heating system. The boiler already carries connection terminals for this thermostat, as well as for a time clock. The burner continues to operate until it is stopped by the timer or one of the thermostats.
- 2.3.6 When the room thermostats and/or timer intervene the main burner shuts down. The fan stops and the pump off via the pump overrun.
- 2.3.7 The condensate trap is fitted with a blockage safety sensor. This prevents the boiler operating should there be a blockage in the condensate discharge trap.
- 3.2.1 An overheat cut off thermostat set slightly higher than the heat thermostat acts to turn off the burner to resetable "lockout" (Fig. 50) 3.

## SECTION 4 GENERAL REQUIREMENTS

### 4.0 SAFETY

#### **Gas Safety (Installation and USE) Regulations, 1994, and amendments 1996.**

It is law that all gas appliances are installed and serviced by a Corgi registered installer (identified by ) in accordance with the above regulations. Failure to install appliances correctly could lead to prosecution. It is in your own interest, and that of safety, to ensure the law is complied with. Check the boiler and flue is the correct type for installation.


The installation of the boiler MUST also be in accordance with the latest I.E.E (BS 7671) Wiring Regulations, local building regulations by-laws of the local water authority, the building regulations and the Building standards (Scotland) and any relevant requirements of the local authority.

### 4.1 GENERAL INFORMATION

Both the user and the manufacturer rely heavily on the installer, whose job it is to install the combination boiler and connect it to a correctly designed heating system. Acquaint yourself with the British Standards concerning installation requirements. If you need advice on any points your Ravenheat Technical Services Office would be pleased to help. It is recommended that tools suitable


## OVERALL DIMENSION

Fig. 3

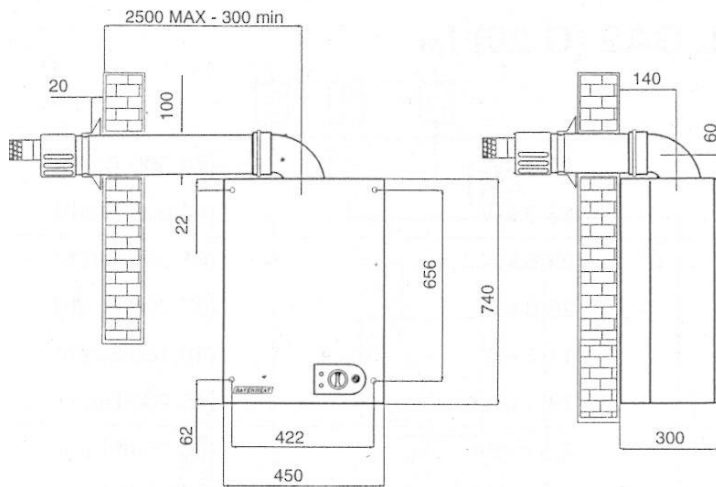

## PRESSURE DROP ACROSS APPLIANCE

Fig. 5

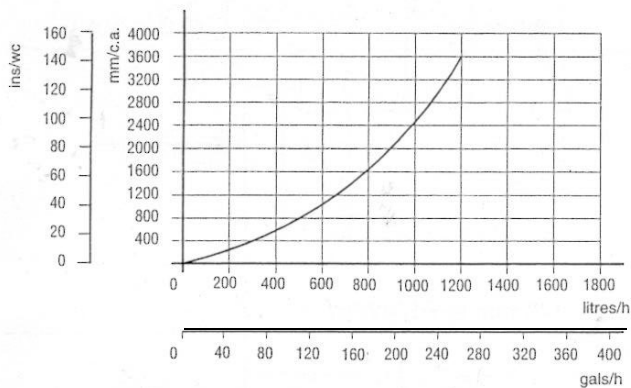

for brass fittings are used, and have a capability to accommodate hexagon sizes up to 50 mms.

### CODES OF PRACTICE/Fief: Documents

Detailed recommendations are contained in the following British Standard Codes of Practice:

- BS. 6891 Low pressure installation pipes.
- BS. 6798 Installation of gas fired hot water boilers of rated input not exceeding 60 kW.
- BS. 5449 Forced circulation hot water systems.
- BS. 5546 Installation of gas hot water supplies domestic purposes (2nd Family Gases).
- BS. 5440: 1 Flues (for gas appliances of rated input not exceeding 60 kW).

BS. 5440:2 Ventilation (for gas appliances of rated input not exceeding 60 kW).

DD 189:1 1990 Discharge of condensate

Health & Safety Document No. 635

**The Electricity at Work Regulations, 1989.**

The manufacturer's notes must NOT be taken, in any way, as overriding statutory obligations.

**IMPORTANT.** These appliances are CE certificated for safety and performance. It is, therefore, important that no external control devices e.g. flue dampers, economisers etc., are directly connected to this appliance unless covered by these Installation and Service Instructions or as otherwise recommended by Ravenheat in writing. If in doubt please enquire.

Any direct connection of a control device not approved by Ravenheat could invalidate the certification and the normal appliance warranty. It could also infringe the Gas Safety regulations and the above regulations.

**NOTE:** The Ravenheat CSI Primary boiler has been tested and examined by BG, and is certified to comply with PrEN 483.

Manufacturers instructions must NOT be taken in any way as overriding statutory obligations.

If in doubt on any point please consult Ravenheat Manufacturing Ltd.

## 4.2

### LOCATION OF BOILER

#### 4.2.1

Siting of Ravenheat CSI Primary Boiler must be as follows. The position of installation should be within the building, unless otherwise protected by suitable enclosure. Adequate space for installation, servicing and air circulation around boiler must be allowed for.

The Ravenheat CSI Primary must be fitted on a flat and vertical wall capable of adequately supporting the weight of the boiler and any ancillary equipment.

The appliance may be installed on a combustible wall subject to the requirements of the Local Authority and Building Regulations.

**LPG versions of this appliance shall not be installed in cellars or basements.**

## 4.3

### CLEARANCES AROUND THE APPLIANCE

#### 4.3.1

The following minimum free spaces, required for installation inspection and servicing, must be left around the boiler:

## SECTION 3 TECHNICAL DATA

TABLE 1

**NATURAL GAS (G 20) I<sub>2H</sub>**

NOMINAL HEAT INPUT NET		24.8 kW	(84,500 Btu/h)
MINIMUM HEAT INPUT NET		13.0 kW	(44,500 Btu/h)
NOMINAL HEAT OUTPUT		23.8 kW	(81,200 Btu/h)
NOMINAL HEAT OUTPUT CONDENSING		25.6 kW	(87,200 Btu/h)
MINIMUM HEAT OUTPUT		11.7 kW	(40,100 Btu/h)
MINIMUM HEAT OUTPUT CONDENSING		13.4 kW	(45,700 Btu/h)
GAS RATE	max	2.5 m <sup>3</sup> S/h	(88.25 ft <sup>3</sup> /h)
AFTER 10 MINUTES	min	1.3 m <sup>3</sup> S/h	(45.9 ft <sup>3</sup> /h)
INLET PRESSURE	20 mbar	(8.0 in w.g.)	
BURNER PRESSURE	max	10.5 mbar	(4.2 in w.g.)
	min	2.0 mbar	(0.8 in w.g.)
MAIN BURNER INJECTORS	Nr. 13 x 1.25		
PILOT BURNER INJECTOR	0.27 x 2 HOLES		
ELECTRICAL SUPPLY	230V - 50HZ		
POWER CONSUMPTION	60W		
EXTERNAL FUSE RATING	3A		
INTERNAL FUSE	4 A	(20 mm to BS 4265)	
DRY WEIGHT	kg 35		
WATER CONTENT C.H.	litre 0.5		
GAS SUPPLY CONNECTION	1/2" RC		
FLOW CONNECTION C.H.	22 mm		
RETURN CONNECTION C.H.	22 mm		
CONDENSATION DRAIN	3/4" (21.5 mm) push fit over flow		
SEALED WATER SYSTEM C.H.			
MAX PRESSURE PHS		2.5 bar	(35.6 p.s.i.)
MINIMUM WORKING PRESSURE		0.5 bar	(7.35 p.s.i.)
CENTRAL HEATING OPERATING TEMPERATURE MAX	85 °C		
	MIN 62 °C		
DESIGN FLOW RATE	1023 l/h (225 gals/h) 20 °C RISE		
MINIMUM FLOW RATE C.H.	503 l/h (111 gals/h)		
FLUE OUTLET NOM. DIAMETER	100 mm specially supplied with boilers		
DESTINATION:	AT. CH. DK. ES. FI. GB. IE. IT. PT. SE.		
FLUE TYPE -	C12 - C32 - C52		
CATEGORY I <sub>2H</sub>	NOX 2		

## SECTION 3 TECHNICAL DATA

TABLE I/A

**LPG (G 30 - G 31) I3+**

NOMINAL HEAT INPUT NET	24.8 kW	(84,500 Btu/h)
MINIMUM HEAT INPUT NET	13.0 kW	(44,500 Btu/h)
NOMINAL HEAT OUTPUT	24.1 kW	(82,100 Btu/h)
NOMINAL HEAT OUTPUT CONDENSING	25.6 kW	(87,200 Btu/h)
MINIMUM HEAT OUTPUT	11.7 kW	(40,100 Btu/h)
MINIMUM HEAT OUTPUT CONDENSING	13.4 kW	(45,700 Btu/h)
GAS RATE	max G 31 0.95 m <sup>3</sup> /h (33.53 ft <sup>3</sup> /h)	G 30 0.79 m <sup>3</sup> /h (27.89 ft <sup>3</sup> /h)
AFTER 10 MINUTES	min 0.5 m <sup>3</sup> /h (17.65 ft <sup>3</sup> /h)	0.4 m <sup>3</sup> /h (14.12 ft <sup>3</sup> /h)
INLET PRESSURE	37 mbar G 31	28 - 30 mbar G 30
BURNER	max G 31 35.4 mbar (14.0 in w.g.)	G 30 27.3 mbar (10.9 in w.g.)
PRESSURE	min 7.3 mbar (2.92 in w.g.)	7.0 mbar (2.8 in w.g.)
MAIN BURNER INJECTORS	Nr. 13 x 0.75	
PILOT INJECTOR	0.22 x 1 HOLE	
ELECTRICAL SUPPLY	230V-50HZ	
POWER CONSUMPTION	60W	
EXTERNAL FUSE RATING	3A	
INTERNAL FUSE	4 A (20 mm to BS 4265)	
DRY WEIGHT	kg 35	
WATER CONTENT C.H.	litre 0.5	
GAS SUPPLY CONNECTION	1/2" RC	
FLOW CONNECTION C.H.	22 mm	
RETURN CONNECTION C.H.	22 mm	
CONDENSATION DRAIN	3/4" (21.5 mm) push fit over flow	
SEALED WATER SYSTEM C.H.		
MAX PRESSURE PMS	2.5 bar	(35.6 p.s.i.)
MINIMUM WORKING PRESSURE	0.5 bar	(7.35 p.s.i.)
CENTRAL HEATING OPERATING TEMPERATURE MAX	85 °C	
	MIN 62°C	
DESIGN FLOW RATE 1023 l/h (225 gals/h)	20 °C RISE	
MINIMUM FLOW RATE C.H./503 Lts/h (111 gals/h)		
FLUE OUTLET NOM. DIAMETER	100 mm specially supplied with boilers	
DESTINATION:	BE. CH. ES. FR. GB. IE. IT. PT.	
FLUE TYPE	- C52 - C32 - C52	
CATEGORY I3+	NOX 2	



18 inches (450 mm) in front  
5 inches (125 mm) above,  
6 inches (150 mm) below  
0.2 inches (5 mm) on each side  
1 inch (25 mm) in front when installed in a cupboard.

#### 4.4 IMPORTANT NOTICE

- 4.4.1** If the boiler is to be fitted in a timber framed building it should be fitted in accordance with the British Gas Publication Guide for Gas Installations in Timber Frame Housing Reference DM2. If in doubt advice must be sought from the local gas supplier. The boiler may be installed in any room or internal space, although particular attention is drawn to the requirements of the current I.E.E. Wiring Regulations, and in Scotland the electrical provisions of the Building Regulations applicable in Scotland, with respect to the installation of the combination boiler in a room or internal space containing a bath or shower. Where a room sealed appliance is installed in a room containing a bath or shower, any electrical switch or appliance control, utilising mains electricity should be so situated that it cannot be touched by a person using a bath or shower. A compartment used to enclose the boiler MUST be designed and constructed specifically for this purpose. An existing cupboard, or compartment, may be used provided it is modified accordingly. Samples of the CSI boiler have been examined by B.G. Technology Notified Body, and is certified to comply with the essential requirements of the Gas Appliance Directive 90/396/EEC, the Low Voltage Directive 72/23/EEC and shows compliance with the Electro Magnetic Compatibility Directive 89/336/EEC and are therefore permitted to carry the CE Mark. **The appliance has been tested and approved by the WRC as meeting the requirements of G3 and L of the Building regulations and water Bylaws Scheme - Approved Products.**

#### 4.5 GAS SUPPLY

- 4.5.1** A gas meter is connected to the service pipe by the Local Gas Region or the Local Gas Region contractor. An existing meter should be checked preferably by the Gas Region to ensure that the meter is adequate to deal with the rate of gas supply required for all appliances it serves. Installation pipes should be fitted in accordance with BS 6891. Pipework from the meter to the boiler must be of adequate size (22 mm) min. To within at least 3 metre of the boiler (15 mm) min. can then **be used for remaining pipe work to the appliance.** A smaller size than the boiler inlet gas connection should not be used. The complete installa-

tion must be tested for soundness as described in the above Code. N.B. if the gas supply for the boiler serves other appliances ensure an adequate supply is available both to the boiler and the other appliances when they are in use at the same time.

#### 4.6 FLUE SYSTEM

- 4.6.1** The terminal should be located where dispersal of combustion products is not impeded and with due regard for the damage or discolouration that might occur to building products in the vicinity (see fig. 6). The terminal must not be located in a place where it is likely to cause a nuisance. In cold and/or humid weather water vapour may condense on leaving the flue terminal. The effect of such steaming must be considered. The terminal must not be closer than 25 mm (1 in) to any combustible material. For protection of combustibles, refer to BS 5440.1. Where a flue terminal is installed less than 1000 mm from a plastic, or painted gutter; or 500 mm from painted eaves, an aluminium shield 1000 mm. long, should be fitted to the underside of the gutter or painted surface.

Plumbing will occur at the terminal so, where possible, terminal positions which could cause a nuisance should be avoided. The flue must be installed in accordance with the recommendations of BS 5440: Part 1.

#### IMPORTANT NOTES

**For greater flue lengths see twin flue instructions.  
Flue must be positioned in a place not likely to cause a nuisance.**

**IMPORTANT:** The following notes are intended for general guidance.

The boiler MUST be installed so that the terminal is exposed to external air.

It is important that the position of the terminal allows the free passage of air across it at all times.

Minimum acceptable spacing from the terminal to obstructions and ventilation opening are specified in Fig. 6.

**Note positions: Due to the terminal design, installation is possible with clearances less than those specified in BS 5440, Part 1.**

NOTE: The flue must be terminated in a place not likely to cause a nuisance:

4.6.2 A concentric vertical flue kit is available: for flueing applications up to a maximum height of 4.0 metres.  
For further details see vertical flue installation instructions.

4.7 **AIR SUPPLY**

4.7.1 The following notes are intended for general guidance.  
The room sealed fan flued boiler does not require a permanent air vent for combustion air supply.  
Where installed in a cupboard or compartment ventilation is not required.

**CONDENSATE DRAIN**

A condensate drain is provided on the boiler. This drain must be connected to a drainage point. All pipework and fittings in the condensate drainage system **MUST** be made of plastic no other materials may be used. Discharge of condensate DD 189:1990.


The drain outlet on the boiler is standard 3/4" (21.5 mm) push fit overflow pipe.  
NOTE: Condensate drain pipework must never be less than 15 mm.

Important: any external runs must be carried out in 1 1/4 (32 mm) wastepipe.  
A fall of 2.5" (45 mm/m) all runs must have.

4.8 **WATER CIRCULATION (central heating)**

4.8.1 Detailed recommendations are given in BS 6798 5449.1.1977 (for smallbore and microbore central heating systems). The following notes are given for general guidance.

Fig. 6

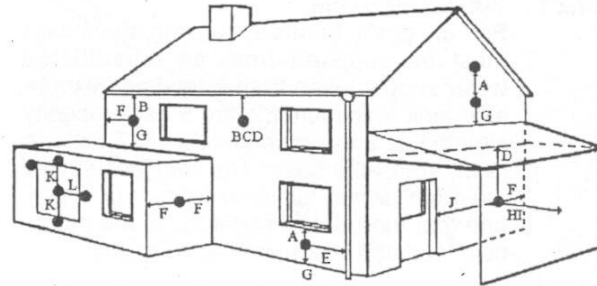


Terminal position for fan assisted boiler (minimum distance)	mm	
A - Directly below an open window or other opening (e.g. air brick)	300	
B Below gutters, soil pipes or drain pipes	25	} From a terminal guard
C Below eaves	25	
D Below balconies or car port roof	25	
E From vertical drain pipes and soil pipes	25	
F From internal or external corners	25	
G - Above ground or below balcony level	300	
H - From a surface facing a terminal	600	
I From a terminal facing a terminal	1200	
J From an opening in the car port (e.g. door window) into dwelling.	1200	
K Vertically from a terminal on the same wall	1500	
L - Horizontally from a terminal on the same wall	300	

4.8.2 **Pipework**

Copper tubing to BS 2871 1.1 .1971 is recommended for water pipes. Jointing should be either with capillary soldered or with compression fittings.  
Where possible pipes should have a gradient to ensure air is carried naturally to air release points and water flows naturally to drain taps. It should be ensured as far as possible that the appliance heat exchanger is not a natural collecting point for air. Except where providing useful heat, pipes should be insulated to prevent heat loss and to avoid freezing. Particular attention should be paid to pipes passing through ventilated spaces in roofs and under floors.

Fig. 6A

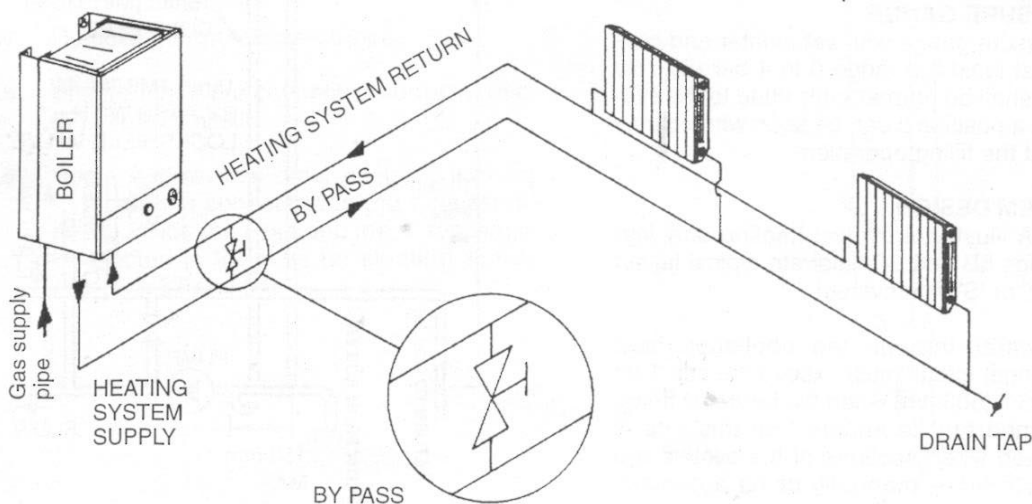

## WATER SYSTEM

### 4.8.2.1 WATER SYSTEM

For an open (vented) system the boiler must be supplied from an unrestricted water supply taken from a feed and expansion tank (minimum 22 litre 5 gall) capacity situated at a maximum height of 27.5 metre (90ft) above the boiler. The cold feed supply must be 15 mm minimum size. It is important that the relative positions of the pump, cold feed and open vent. See Fig. 6D.

### 4.8.2.2 CYLINDER

The hot water cylinder must be a double feed (fully indirect) type.

### 4.8.2.3 SEALED WATER SYSTEMS

The installation should comply with the appropriate requirements of BS5449 Part 1 and BS6798, see Fig. 6E. All valves and fittings must be suitable for use on sealed systems.

### 4.8.2.4 SAFETY VALVE

The safety valve must be fitted in a sealed system. The safety valve must Conform to BS6759 Part 1 and be fitted to the requirements of BS6798.

### 4.8.2.5 EXPANSION VESSEL

A diaphragm type expansion vessel, conforming to BS4814 must be connected at a point close to the inlet side of the circulating pump, see Fig. 6E or as laid down by the manufacturer.

The expansion vessel must suit the volume of water in the system, see BS5449 Part 1 clause 25 for details. The charge pressure must not be less than static head i.e. the height of the highest point of the system ABOVE the expansion vessel.

The expansion vessel should have sufficient capacity to accept the volume change when the water is heated from 10 °C to 110 °C. Refer to BS5449 Part 1 for specific details. See Table 3.

### 4.8.2.6 PRESSURE GAUGE

A pressure gauge with set pointer and covering at least the range 0 to 4 bar (0 to 60 lb/in<sup>2</sup>) shall be permanently fitted to the system in a position it can be seen when carrying out the filling operation.

### 4.8.2.7 SYSTEM DESIGN

Fig. 6A illustrates typical heating only layout, Figs 6B and 6C illustrate typical layout with 'Y' or 'S' plan system.

4.8.3 The water through the appliance heat exchanger circuit must exceed the mm 1.84 gals.min. (503 lt/h) when the burner is firing. It is important to ensure that this rate is achieved when sections of the system are shut of: either manually or bu automatic

Fig. 6B

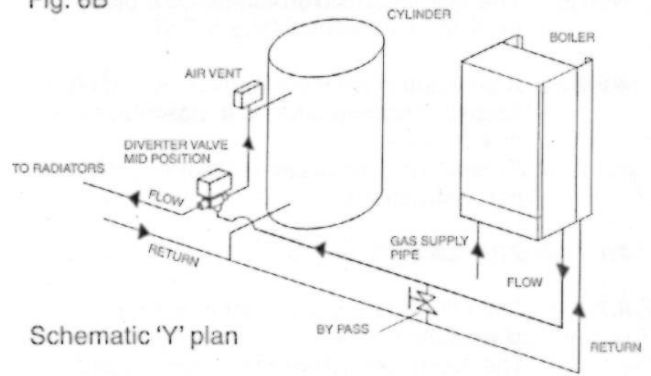


Fig. 6C

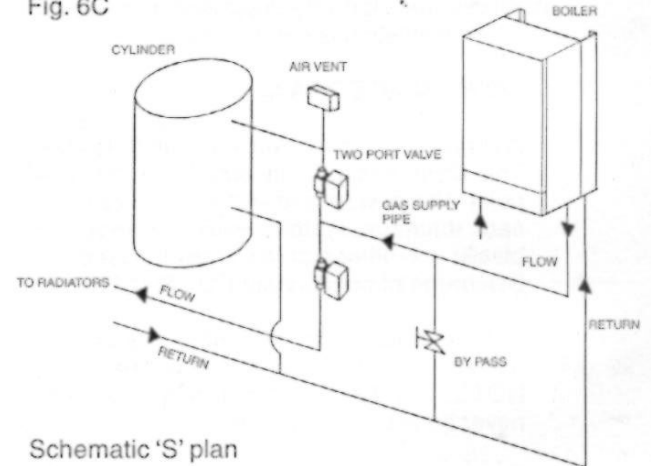


Fig. 6D

Open (vented) system pipework requirements


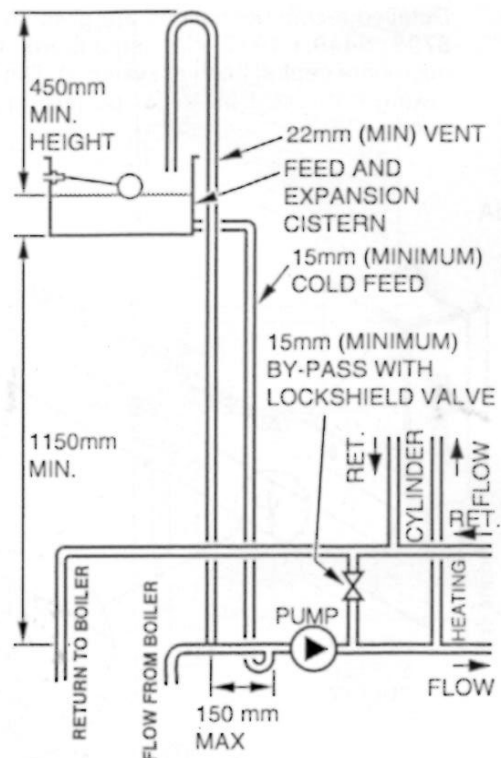


Fig. 6E

Sealed water system diagrammatic layout

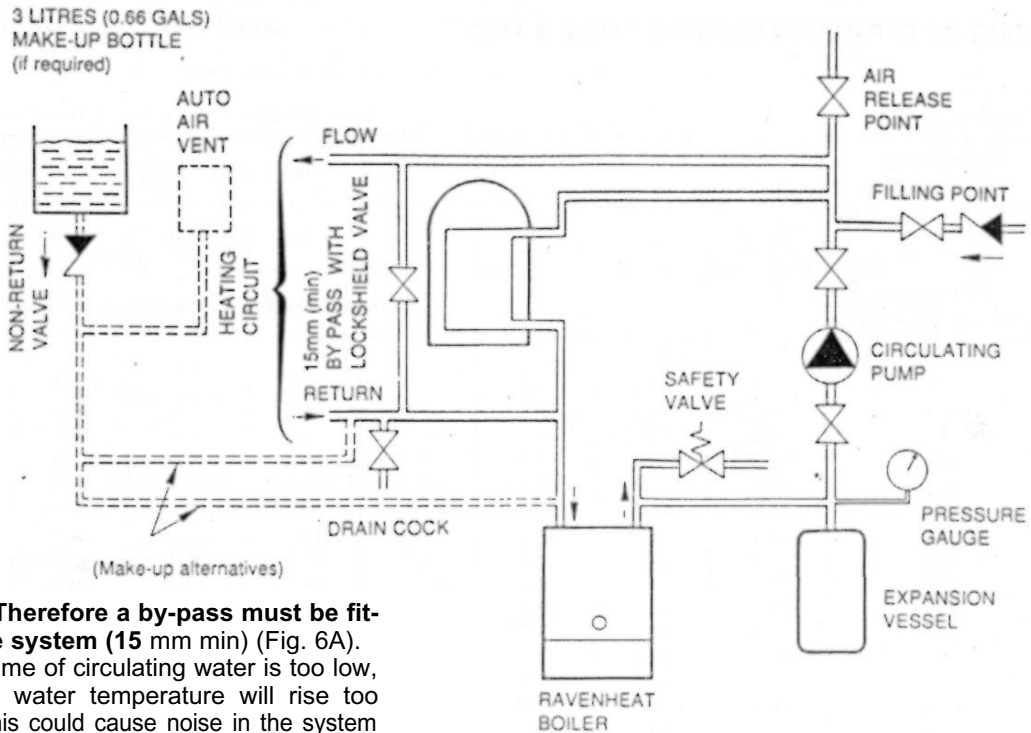

controls. Therefore a by-pass must be fitted to the system (15 mm min) (Fig. 6A). If the volume of circulating water is too low, the boiler water temperature will rise too rapidly. This could cause noise in the system or even cause the safety thermostat to trip.

**4.8.4. Draining tap**

These must be located in accessible positions to permit the draining of the whole system. The taps must be at least 15 mm nominal size and manufactured in accordance with BS 2870 1980.

**4.8.5. Air release points**

These must be fitted at all high points where air will naturally collect, and must be sited to facilitate complete fitting of the system.

**4.8.7. Mains water feed: central heating**

There must be no direct connection to the mains water supply, even through a non-return valve, without the approval of the Local Water Authority.

**4.8.8. Permissible methods of filling**

Cistern method (Fig. 8). The system may be filled by one of the following methods. Through a cistern used for no other purpose, via a halfvalve permanently connected directly to a service pipe and/or cold water distributing pipe. The static head available from the cistern should be adequate 10 provide the initial system design pressure.


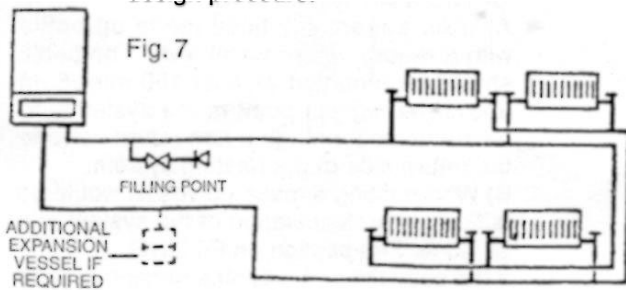


Fig. 7


The cold feed pipe from the cistern should include a non-return valve, and a stop-valve with an automatic air vent connected between them, with the stop valve being located, between the cistern and the automatic air vent. The stop valve may remain open during normal operation of the system, if automatic water make-up is required. Booster pump method (Fig. 8).

Fig. 8

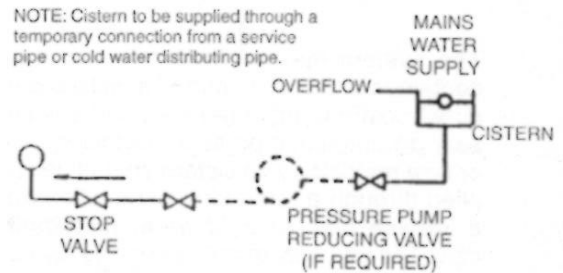

NOTE: Cistern to be supplied through a temporary connection from a service pipe or cold water distributing pipe.

Fig. 9

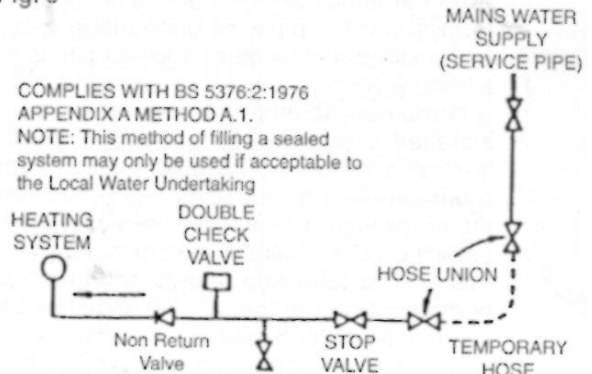

COMPLIES WITH BS 5376:2:1976 APPENDIX A METHOD A.1. NOTE: This method of filling a sealed system may only be used if acceptable to the Local Water Undertaking

SIZING OF EXPANSION VESSELS: TABLE 3

Safety valve setting (bar)	3.0									
Vessel charge pressure (bar)	0.5				1.0			1.5		
Initial system pressure (bar)	0.5	1.0	1.5	2.0	1.0	1.5	2.0	1.5	2.0	
Total water content Of system	EXPANSION VESSEL VOLUME (LITRES)									
Litres										
25	2.1	3.5	6.5	13.7	2.7	4.7	10.3	3.9	8.3	
50	4.2	7.0	12.9	27.5	5.4	9.5	20.6	7.8	16.5	
75	6.3	10.5	19.4	41.3	8.2	14.2	30.9	11.7	24.8	
100	8.3	14.0	25.9	55.1	10.9	19.0	41.2	15.6	33.1	
125	10.4	17.5	32.4	68.9	13.6	23.7	51.5	19.5	41.3	
150	12.5	21.0	38.8	82.6	16.3	28.5	61.8	23.4	49.6	
175	14.6	24.5	45.3	96.4	19.1	33.2	72.1	27.3	57.9	
200	16.7	28.0	51.8	110.2	21.8	38.0	82.4	31.2	66.2	
225	18.7	31.5	58.3	124.0	24.5	42.7	92.7	35.1	74.5	
250	20.8	35.0	64.7	137.7	27.2	47.5	103.0	39.0	82.7	
275	22.9	38.5	71.2	151.5	30.0	52.2	113.3	42.9	91.0	
300	25.0	42.0	77.7	165.3	32.7	57.0	123.6	46.8	99.3	
325	27.0	45.5	84.1	179.1	35.7	61.7	133.9	50.7	107.6	
350	29.1	49.0	90.6	192.8	38.1	66.5	144.2	54.6	115.8	
375	31.2	52.5	97.1	206.6	40.9	71.2	154.5	58.5	124.1	
400	33.3	56.0	103.6	220.4	43.6	76.0	164.8	62.4	132.4	
425	35.4	59.5	110.1	239.2	46.3	80.7	175.1	66.3	140.7	
450	37.5	63.0	116.5	247.9	49.0	85.5	185.4	70.2	148.9	
475	39.6	66.5	123.0	261.7	51.8	90.2	195.7	74.1	157.2	
500	41.6	70.0	125.9	275.5	54.5	95.0	206.0	78.0	165.5	
For system volumes other than those given above, multiply the system volume by the factor across	0.0833	0.140	0.259	0.551	0.109	0.190	0.412	0.156	0.331	

Note: This pressure can be increased up to 1.5 bar to suit high static head situations. see item 10, other appliance components in the SERVICING INSTRUCTIONS.

The system may be filled through a self contained unit comprising of a cistern pressure booster pump if required and if necessary an automatic pressure reducing valve or flow restrictor. The cistern should be supplied through a temporary connection from a service pipe or cold water distributing pipe. The unit may remain permanently connected to the heating system to provide limited automatic water make up.

Mains topping up method (Fig. 9).

Here the temporary connection is supplied from a service pipe, or distributing pipe, which also supplies other draw-off points at a lower level.

A combined double check valve shall be installed upstream of the draw-off point, through a temporary hose connection **from** a tap supplied from the mains, where the mains pressure is excessive a pressure reducing valve shall be used to make filling easier. The following fittings shall form a permanent part of the system and shall be fitted in the order stated.

a) A stop valve complying with the require-

ments of BS 1010 Part 2 (the temporary hose from the draw off tap shall be connected to this fitting).

- b) A test clock.
- c) Double check valve of an accepted type.
- d) A non return valve of an accepted type.

**We recommend use of a Ravenheat Filling Loop** designed for this method of filling the system. Available from your supplier.

**PROVISIONS FOR MAKE UP WATER**  
(Fig. 7)

Provision can be made for replacing water loss from the system either.

A) from a manually filled made up bottle with a readily visible water level. The bottle should be mounted at least 150 mm (6 in) above the highest point of the system and be connected through a non return valve to the return side of the heating system.

B) Where fitting a make up vessel would be difficult re pressurisation of the system can be done. See section on FILLING.

If the capacity of the central heating system

should exceed 110 litres, an additional vessel should be installed on the return to the combination boiler from the heating system (Fig. 7). Guidance on vessel sizing is given in (Table 3).

Reference should be made to British Gas Publications <<(Material and Installation Specifications for Domestic Central Heating and Hot Water)>>. Draining taps should be at least 1/2" in BSP nominal size and be in accordance with BS 2879.

#### 4.8.9 Installation to an existing central heating system

Before installing a new boiler to an existing system, flush out the old system with a recommended descaling agent.

It is most important that the correct concentration of the water treatment product is maintained in accordance with the manufacturers' instructions.

If the boiler is installed in an existing system any unsuitable additives *MUST* be removed by thorough cleansing.

BS 7593:1992 details the steps necessary to clean domestic central heating system. Also check pipework and renew any corroded pipework or fittings. Valve glands must be repacked or replaced wherever necessary and any defective controls exchanged.

#### WATER TREATMENT

This boiler has a secondary ALUMINIUM alloy heat exchanger Ravenheat recommended only the use of FERNOX-COPAL SENTINEL XI00 or SALAMANDER CORROSION GUARD water treatment products, which must be used in accordance with the manufacturers instructions. For further information contact:

Fernox Manufacturing Co. Ltd.  
Tel. 01799 550811

Sentinel Division Betz Dearborn Ltd.  
Tel. (0151) 424 5351

Salamander (Eng) Ltd  
Tel. (0121) 3780952/4508

#### 4.10 ELECTRICAL SUPPLY

**Warning: this appliance must be earthed**

- 4.10.1 External wiring to the appliance must be carried out by a competent person and be in accordance with the current I.E.E. Regulations and local regulations which apply. The Ravenheat boiler is supplied for connection to a 230 V - 50 Hz single phase supply. **The supply must be fused at 3 A.**

NOTE: The method of connection to the electricity supply *MUST* facilitate complete electrical isolation of the appliance, by the use of a fused, double pole isolator, having a contact separation of at least 3 mm in all poles. The point of connection to the electricity supply must be readily accessible and

adjacent to the appliance except, where the appliance is installed in a bathroom, this *MUST* be sited outside the bathroom.

## SECTION 5 INSTALLATION

### 5.1 WARNING

- 5.1.1 It is **MOST IMPORTANT** that this appliance is installed in a **VERTICAL POSITION**, with the flue air duct passing through the wall. **Make sure flue slopes 2.5° down towards the boiler that is 45 mm/m fall per metre of flue length.**

Fig. 10


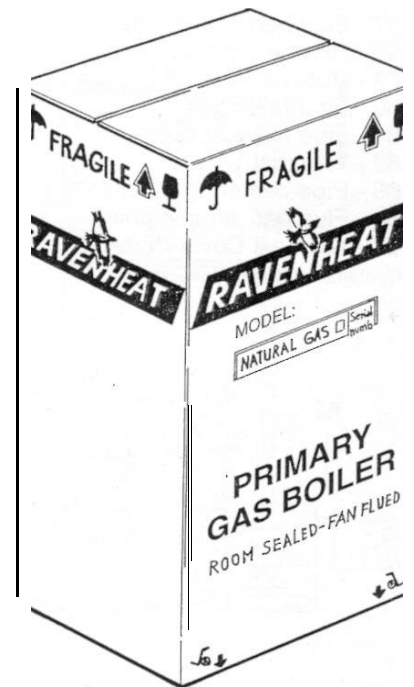


Fig. 11

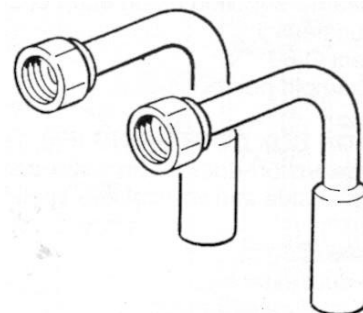

5.2 DELIVERY

5.2.1 The **appliance will arrive on site in two cartons**

Box 1 of 2 containing **(Fig. 10):**

- a) boiler fully assembled
- b) installation instructions and user instructions
- c) white paper template
- d) terminal cover plate (Fig. 12)
- e) - 4 conch bolts and wall plugs  
-screws and dowels


**Polythene bag containing (Fig. 11):**

- a) I-112" BSP Union Gas Cock
- d) 2.22 mm flanged copper tails complete with 3/4" brass nuts and washers

Box 2 of 2 **containing (Fig. 12):**

- Horizontal CSI flue kit
- 57 - Flue bend assembly
- 58 - Header gasket
- 59 - Rubber seal Ø 60
- 60 -Air intake duct
- 61 - Flue exhaust duct
- 62 - Terminal
- 65 - Pipe centering spring
- 66 - Flue gas sample point
- 127 Terminal Cover Plate
- (Contained in the carton Fig. 10)

Fig. 12

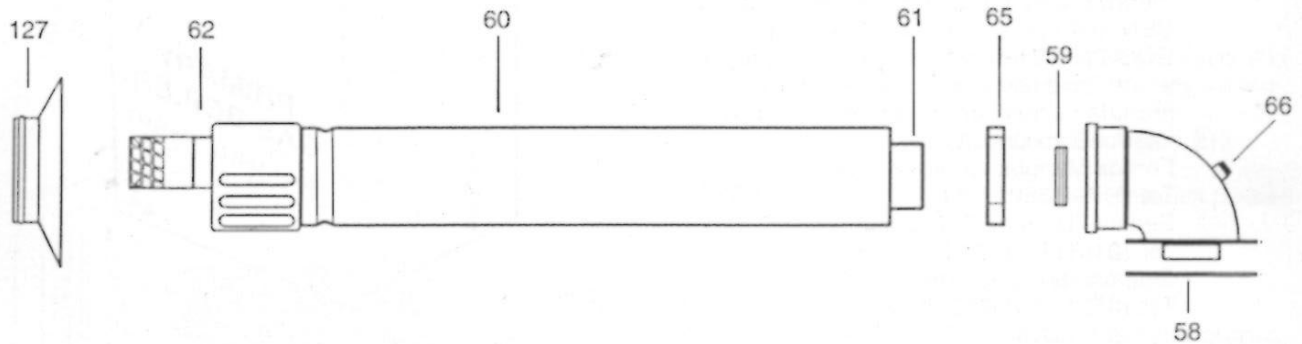

**OPTIONAL EXTRAS:**

Small carton containing: (Fig. 13)

- 57 - Straight header supplied as an extra cost Only when requested
- 59 - Rubber seal Ø 60
- 66 - Flue gas sample point

**FLUE EXTENSION BOX CONTAINING (Fig. 14)**

1000 mm flue extension duct as an extra cost only when requested for side and vertical flue applications

- 59 - Rubber seal Ø 60
- 63 - Air intake duct extension
- 64 - Flue exhaust duct extension
- 65 - Pipe centering spring

**WARNING:**  
Maximum allowable flue length 2.5 m.  
maximum No. 2x1000 mm.  
Flue duct extension used with Standard flue

Fig. 13


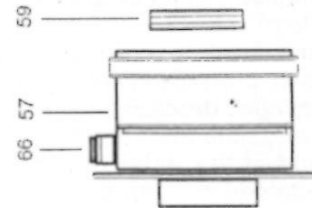


Fig. 14

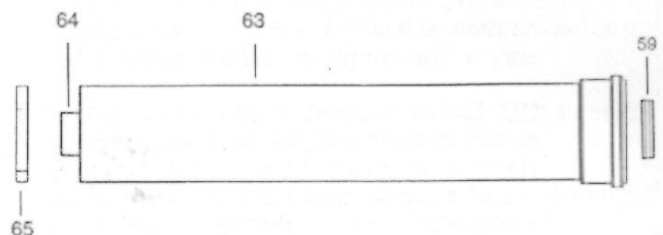

5.3 UNPACKING

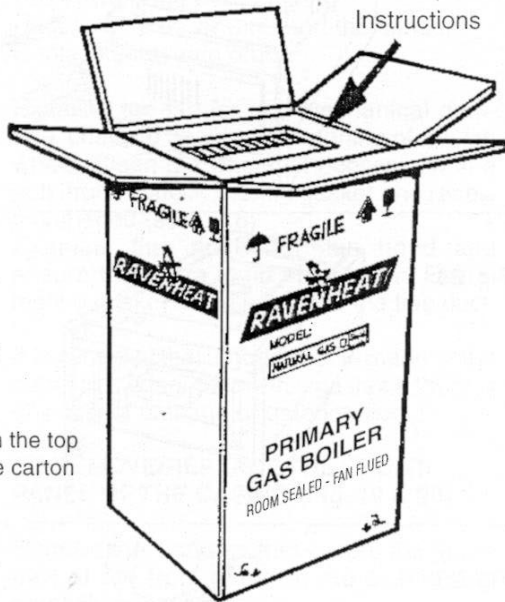


Fig. 15

1) Open the top of the carton

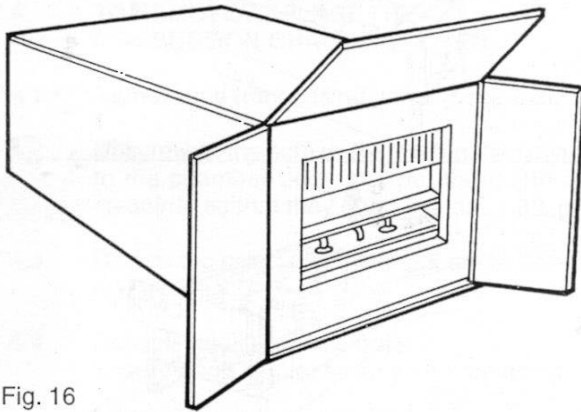


Fig. 16

2) Rest the carton on the floor (keeping the flaps open)

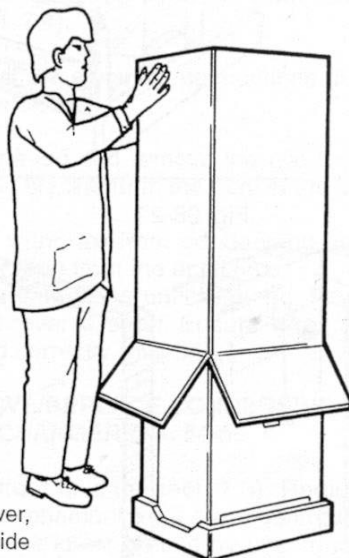


Fig. 17

3) Turn the carton over, with the boiler inside and then pull the carton

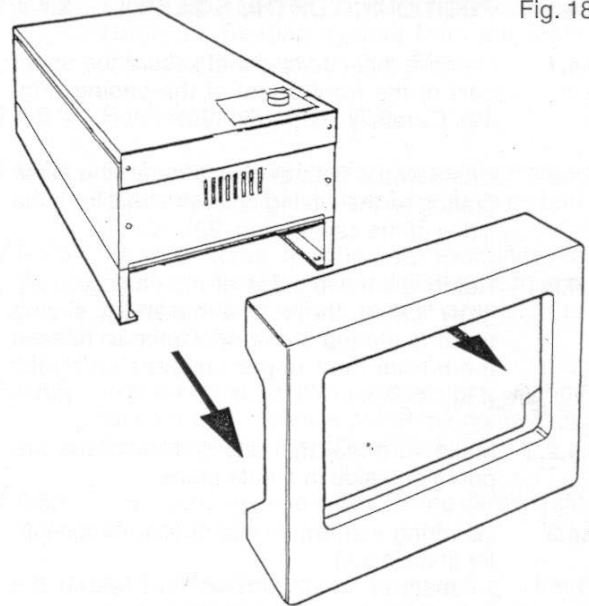


Fig. 18

4) Rest the boiler on the floor and remove the polystyrene guards

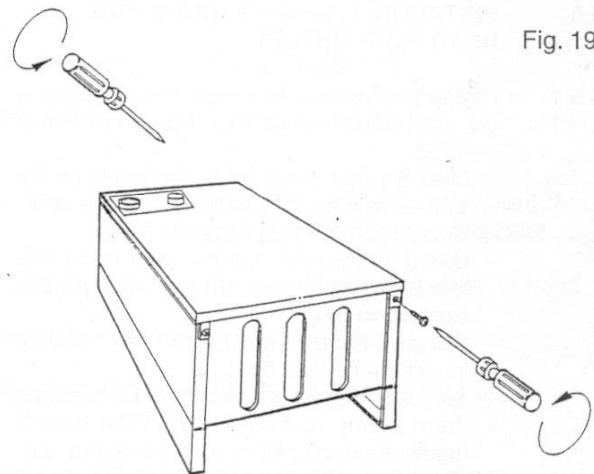


Fig. 19

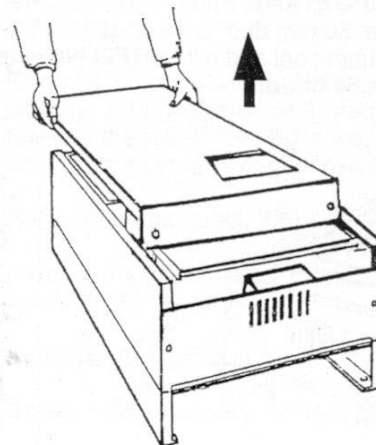


Fig. 20



#### 5.4 POSITIONING OF THE BOILER

5.4.1 Remove the 4 screws that secure the upper part of the front panel of the casing (Fig. 19). Carefully lift off (Fig. 20).

5.4.2 Unscrew the 2 screws that fasten the lower grating on the casing and remove it from the sides of the casing (Fig. 22).

5.4.2.1 Remove the two sides of the casing by slightly lifting them and carefully sliding towards the top of the appliance to release them from their upper suspension hooks (Fig. 26-27).

5.4.2.2 Make sure that the casing and screws are put to one side in a safe place.

5.4.3 Lowering instrument panel (not necessary for installation).

- Unscrew the 2 screws that fasten the instrument panel (Fig. 23).
- Lift the instrument panel in order to detach it from the sides, and lower it down by rotating it on its own hinges (Fig. 24-25). Make sure the casing screws are put to one side in a safe place.

#### 5.5 INSTALLING THE APPLIANCE FOR REAR FLUE OUTLET

5.5.1 Use adhesive tape to attach the template to the wall, making sure that the centre line is vertical.

- Mark the four boiler fastening holes on the wall as well as the centre of the flue duct.
- Detach the template from the wall.
- Use a 10 mm dia drill to make the 4 boiler securing holes. Insert the plastic expansion plugs.
- Cut or core drill a 105 mm dia hole for inserting the flue duct.
- Screw in the two upper coach bolts leaving them about 10 mm out from the wall to enable the boiler to be located on the wall. Fit the elbow header positioning it towards the required direction (Fig. 30).

**IMPORTANT:** Make sure that the elbow's dia. 60 mm duct is inserted into the fan, the rubber Seal and orifice (F2) have been correctly fitted.

Fig. 21

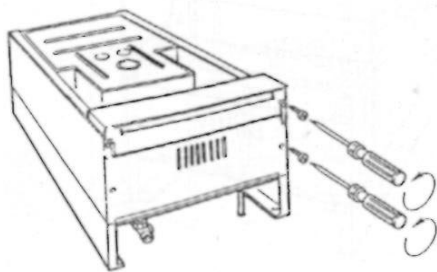


Fig. 22

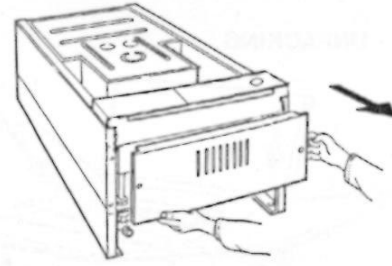


Fig. 23

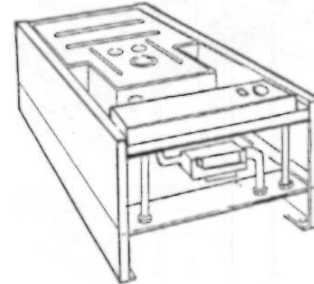


Fig. 25

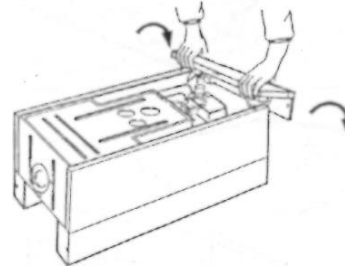


Fig. 26

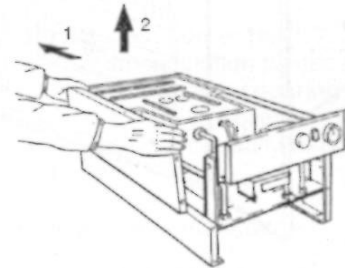


Fig. 27


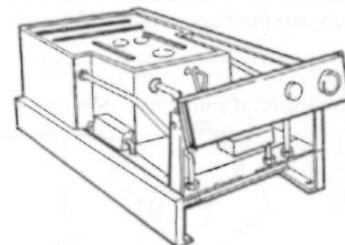


Fig. 28-29

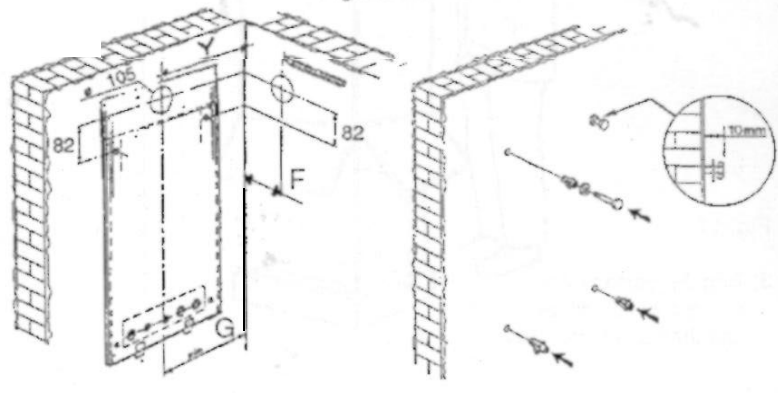


5.5.2 Locate the rubber 0 100 and 0 60 into the flue elbow header (Fig. 30).

5.5.3 If the standard duct furnished with the boiler is too long (the wall to go through is less than 680 mm. thick) it can be shortened as follows:

- Remove the centering spring 65, the flue terminal to disengage inner flue duct.
- Measure the thickness  $W$  of the wall.
- Cut the outer flue duct at right angles to a length equal to  $W + 152$  mm. Must be de-burred.


- Cut the inner flue duct (60 mm) at right angles to a length equal to  $W + 264$  mm. Insert from cut end. Reassemble the two tubes. Insert centering spring 65. Must be de-burred.
- Reassemble together inner and outer flue duct insert centering spring.

Fig. 30

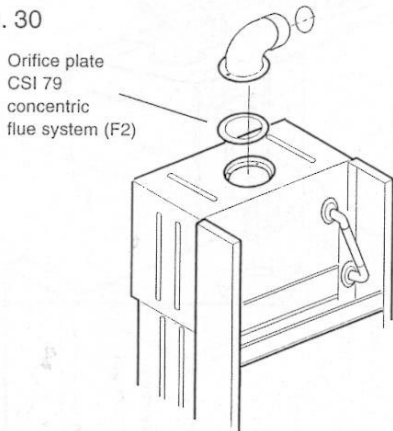

INTAKE AND EXHAUST TERMINAL COMPONENTS


Fig. 31

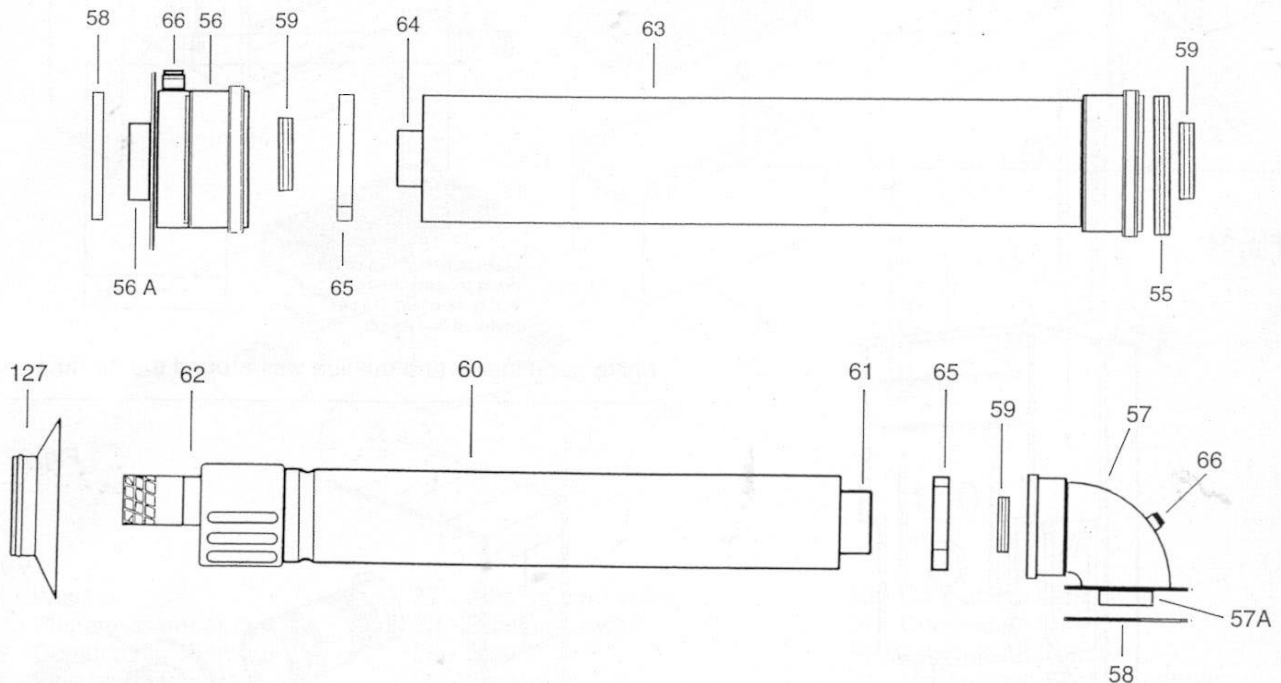

KEY

- |                       |                               |                                  |
|-----------------------|-------------------------------|----------------------------------|
| 56 - Straight header  | 60 STD air intake duct        | 64 - Flue exhaust duct extension |
| 57 - Elbow header     | 61 - STD flue exhaust duct    | 65 - Pipe centering spring       |
| 58 Header gasket      | 62 -Terminal                  | 66 - Sample point                |
| 59 - Rubber seal 0 60 | 63 -Air intake duct extension | 127 - Terminal cover plate       |

Fig. 32

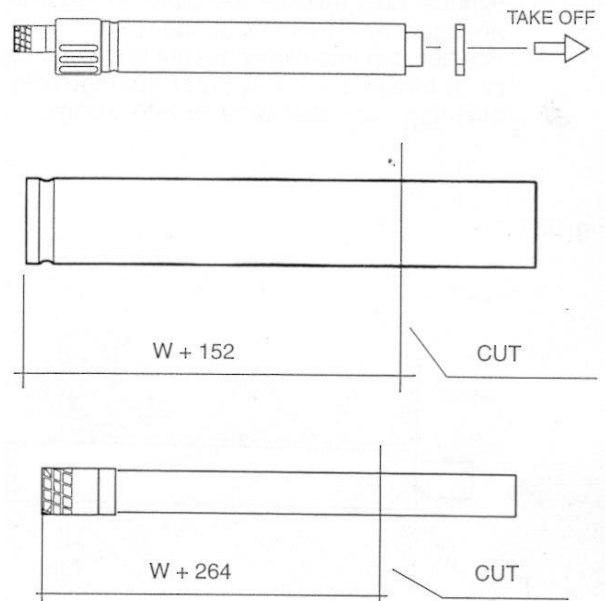

5.5.4 Insert the flue assembly into the wall, being careful to make sure that the outer air duct comes flush to the inner surface of the wall.

5.5.5 Lift the boiler on to the wall (Fig. 34), locating onto the top coach bolts. Fit the two lower coach bolts and tighten all four securing bolts.

5.5.6 Working above the boiler pull the flue exhaust duct towards the boiler in order to engage tube 61 into its header 57A. Position flue into elbow header and push so as to locate inner and outer flue correctly ensuring good seal is made with o rings.

Fig. 33


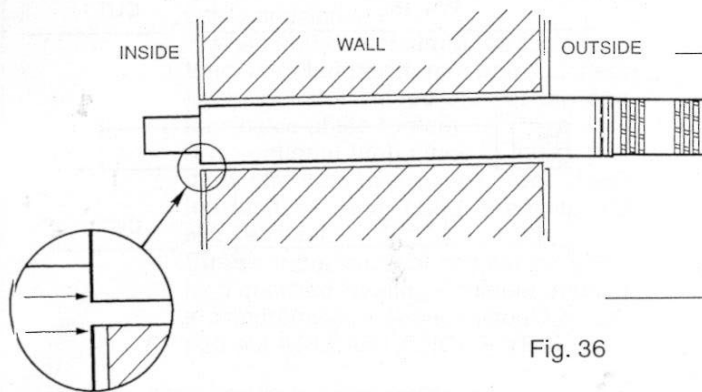


Fig. 34

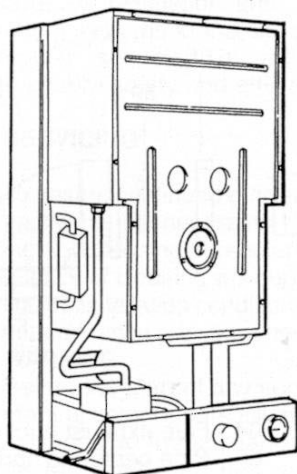

5.5.6 Fit terminal cover plate and terminal guard (Fig. 36-37).

5.5.9 Extension kits are available on order for flue extension of up to 2.5 metres total length (Fig. 31).

Fig. 35



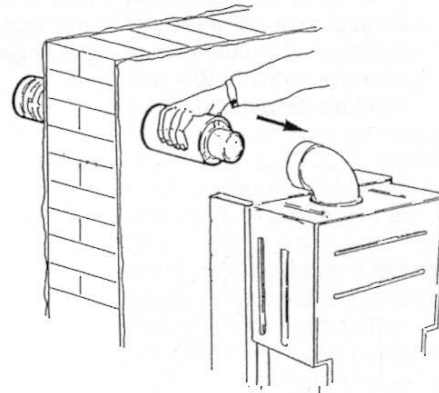


Fig. 36

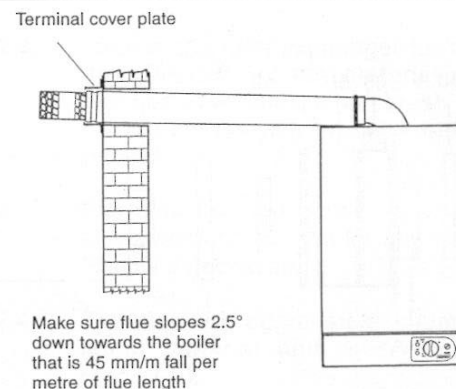

Make good inside and outside wall around the air duct

Fig. 37

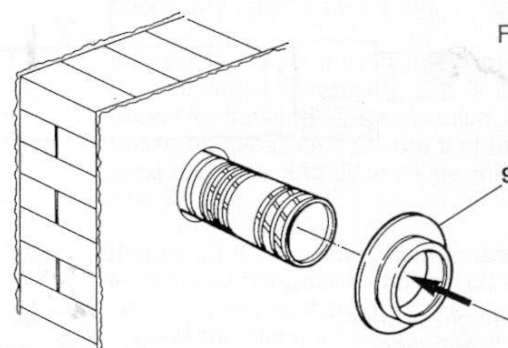

5.5.10 Each extension length extends the pipe by approximately 1000 mm long up to a maximum of two extensions.

Pipeline length can be established using the instructions in section 5.5 for rear flue outlets and section 5.7 for side flue outlets. Extensions must be installed with the widened end of the air intake pipe and the tapered end of the flue pipe aimed towards the exhaust terminal. Extensions must be joined together with the standard terminal pipe, and inserted in each other as far as they can go.

If an extension must be shortened, this must be done from the straight end, and not from the widened or tapered end. To measure the pipeline properly all components must be assembled and total length measured before cutting. The straight end of the extension connects to the boiler. The flue output pipe fits into the boiler header until it stops. The air intake pipe should be located approximately 2 mm. from the boiler header (Fig. 31).

When cutting both inner and outer ducts of the extension, always ensure that the reduced end (male) of the inner duct is longer than the outer duct.

All joints must be sealed with the rubber seals supplied.

It is important to put the centering spacer, supplied with the unit, inside between the two pipes, from the side opposite the extension's straight end.

NOTE: a suitable support bracket is available from Ravenheat Manufacturing and should be used to support flue length at least every 1.8 metre preferably at each joint this bracket should be secured to wall and flue duct.

#### 5.5.11 INLINE FLUE BEND

Measure the distance between the flue bends or the flue/terminal assembly. The measurements should be taken from the outer edge of the flue and bend (Fig. 39B). IMPORTANT: inline flue bend - 1680 mm must be deducted from overall length for each 90° bend. Obtuse flue bend - 1680 mm must be deducted from overall length for each 135° bend (Fig. 398).

#### 5.6 COMPLETING BOILER INSTALLATION

- 5.6.1 Reassemble the outer casing (sect 5.4) proceeding in this order
- 1) Fit the two sides.
  - 2) Refit the instrument panel in reverse order as in sect. 5.4.4.
  - 3) Refit the lower grating (sect. 5.4).

#### 5.7 INSTALLING THE APPLIANCE FOR SIDE FLUE OUTLET (Fig. 39)

- 5.7.1
- Attach the template to the wall with adhesive tape, making sure that the centre line is vertical and that the distance from the centre line to the nearest side wall is not less than measurement in table 6.
  - Mark the four boiler securing holes on the wall and extend the axis of the flue duct hole to the side wall ensuring it is horizontal.
  - Trace the centre of the flue duct hole measure distance F (table 6). From the corner of the wall (Fig. 38), measure the distance Y between the centre of flue duct hole to the corner. Detach the template from wall.
  - Use a dia. 10 mm. drill to make the 4 holes for securing the boiler. Insert the plastic expansion plugs. Core drill a 105 mm dia. hole in the side wall for inserting the flue duct.

TABLE 6

CSI PRIMARY
F = 200 mm G = 275 mm

Fig. 39


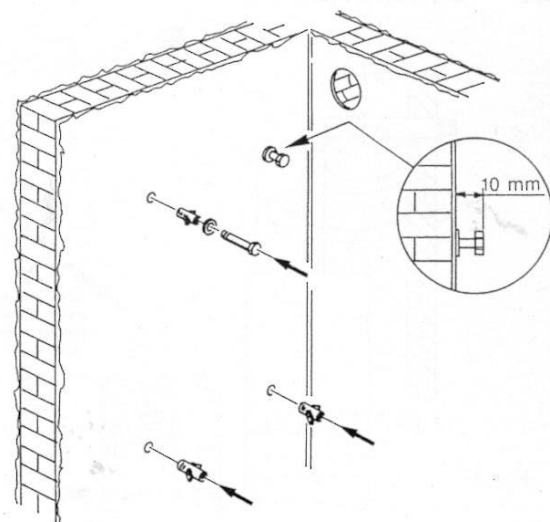


Fig. 39B

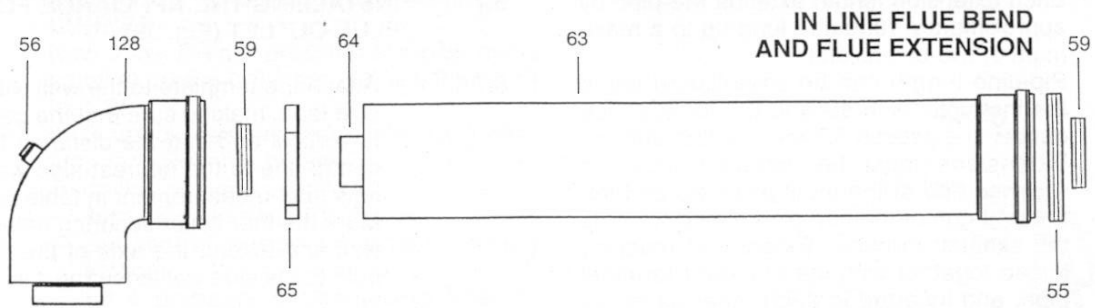

KEY

- 56 - Sample point
- 57 - Elbow Header
- 59 - Rubber seal 0 60

- 63 - Air intake duct extension
- 64 - Flue Exhaust duct extension
- 65 - Pipe centering spring
- 128 - In Line Bend

5.7.2 Positioning the elbow towards the required direction (Fig. 30).

5.7.3 Locate the rubber 0 60 into the elbow (Fig. 30).

- 5.7.5
- If the standard duct furnished with the boiler is too long (position of the boiler from the wall to go through as illustrated in the drawing and wall thicknesses less than what was specified above) it can be shortened as follows: Fig.28-29-31-32.
  - Remove the centering spring 65, pull the flue terminal disengage inner flue duct.
  - Measure the thickness *W* of the wall.
  - Cut the outer air duct (100 mm. dia.) at right angles and to a length equal to  $W+Y - 47$  mm. (Fig. 32).
  - Cut the inner flue duct (60 mm. dia.) at right angles and to a length equal to  $W+Y + 65$  mm.
  - Outer air duct and inner flue duct must be de-burred.

- Reassemble the two tubes.
- Insert centering spring 65.

5.7.6 Insert the flue assembly into the wall, making sure it will not interfere when fixing the boiler on the wall.

5.7.7 Lift the boiler on the wall. Locate onto the top coach bolts. Fit the lower coach bolts and tighten all four securing bolts.

5.7.8 Working above the boiler pull the flue duct towards the elbow in order to engage tube into its header (Fig. 35). Position flue into straight header and push so as to locate inner and outer flue correctly. Ensuring good seal is made with o.rings.

5.7.10 **IMPORTANT:** Terminal rubber must be fitted (Fig. 36-37).

5.7.11 Extension kits are available on order for flue extension of up to 2.5 metres total length (Fig. 31). For further details see sect 5.5.10.

5.7.12 VERTICAL FLUE INSTRUCTIONS ONLY

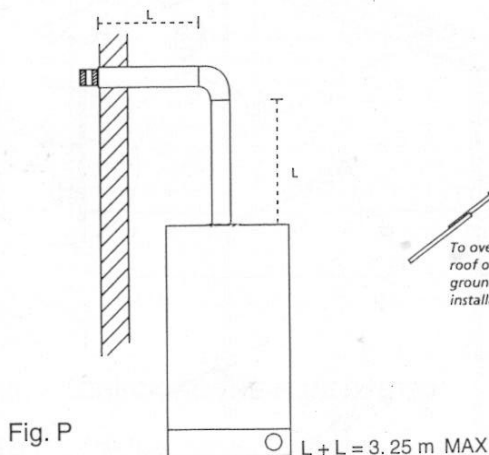


Fig. P

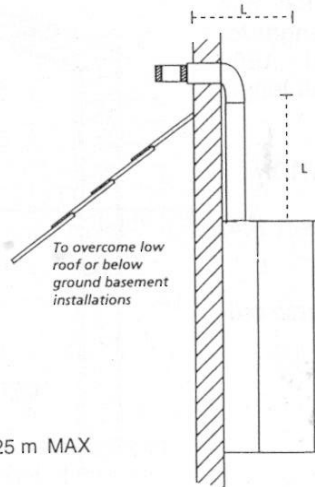


Fig. M

Fig. 40

### 5.7.12 VERTICAL FLUE INSTRUCTION ONLY

INLINE FLUE BEND - 1680 MM MUST BE DEDUCTED FROM OVERALL LENGTH FOR EACH 90° BEND  
 OBTUSE FLUE BEND - 1680 MM MUST BE DEDUCTED FROM OVERALL LENGTH FOR EACH 135° BEND

The vertical flue kit is intended for use where a horizontal flue outlet is not possible or desired. The vertical flue can be used either with a flat roof or a pitched roof (maximum pitch 60°). Where a straight vertical flue is not possible or desired, an offset vertical flue can be used in conjunction with a side horizontal flue extension piece and an inline 135°/190° flue bend (Fig. 41).

**IMPORTANT NOTES**  
 For greater flue lengths see  
 twin flue leaflet

Fig. 41

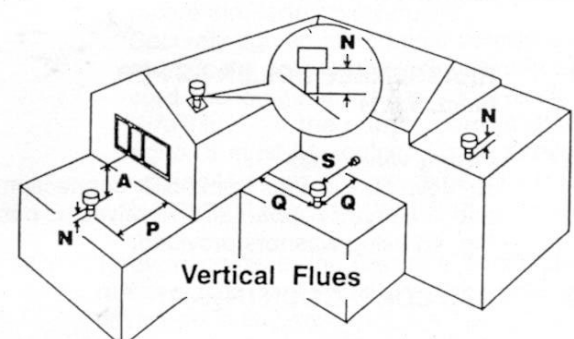
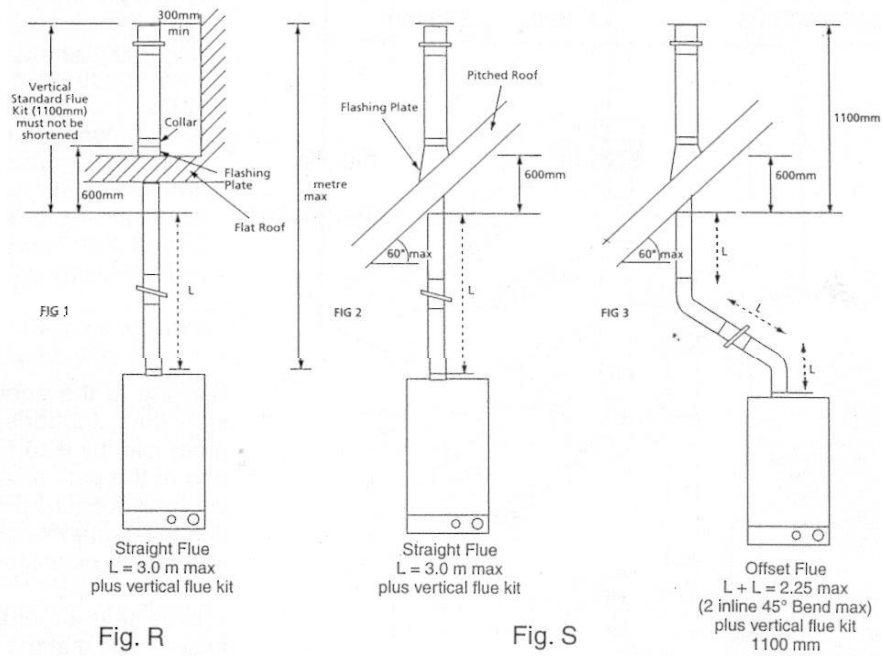


Fig. 42

POSITION	MIN. DISTANCE mm
N above roof level (to base of terminal)	300
P from adjacent wall to flue	300
Q from internal corner to flue	300
S from facing terminal	1,200
M horizontally from a vertical terminal to a wall	300

Before proceeding with installation check the contents of the RAVENHEAT VERTICAL FLUE KIT, comprising of the following pieces:

- 1 RAVENHEAT VERTICAL FLUE complete with terminal assembly (for vertical flue application).
- Additional 1000 mm (approx) Flue Extension pieces as necessary, each extension is provided with inlet and outlet sealing rings and flue centering bracket,
- One box containing straight header with inlet and outlet sealing rings.

Proceed with installation as detailed in section 5 up to 5.4.8., of the main Installation and Servicing Instruction, ignoring all references to horizontal flue installations.

Use adhesive tape to attach the template to the wall, making sure that the centre line is vertical and that the flue centre line is virtually below the point at which the flue will exit the roof.

- Ensure that the maximum permissible flue length is not exceeded (Fig. 42).
- Mark the four boiler fastening holes on the wall.
- Detach the template from the wall.
- Use a 10 mm dia. drill to make the 4 boiler securing holes. Insert plastic expansion plugs (Fig. 29).
- Screw in the two upper coach bolts leaving them about 10 mm out from the wall to enable the boiler to be located on the wall.
- Position the straight header on the top of the appliance (Fig. 43) Item 6, and ensure that the gasket and sealing rings are correctly fitted.

Important: Make sure that the flue header dia 60 mm duct is inserted fully into the fan spigot.

Model	Max no of flue extensions	Overall max flue length	Distance to centre of flue from back wall
CSI PRIMARY	3	4 metre	200 mm


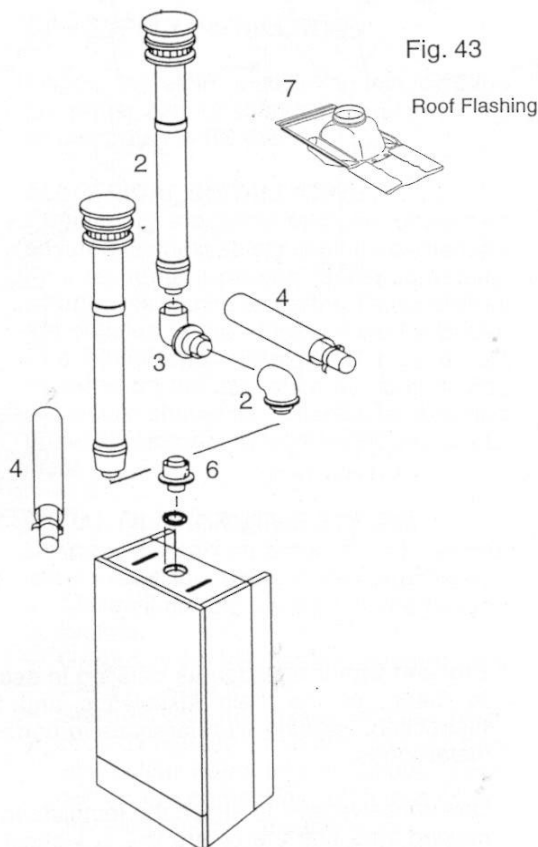


Fig. 43

Roof Flashing

Fig. 44

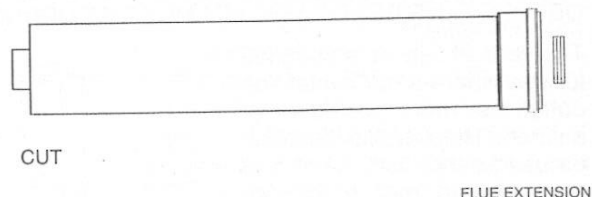

Starting at the appliance end, assemble the extension duct sections, making each inner and outer (flue) joint by inserting the spigot end into the socket end of the next tube, making sure the seal rings are correctly located (Fig. 44). Make sure that the entire flue is adequately supported. Use at least one bracket for each extension used.

Ensure that all inner flue connections have a good fit/seal, and that the space clips in each extension are correctly positioned.

Cut a 105 mm diameter hole through the ceiling and/or roof, at the point previously marked.

Fit a roof flashing sleeve (7 Fig. 43) to the roof, available from Ravenheat Manufacturing.

Insert the Vertical Flue terminal assembly through the flashing plate from the outside.

Fix the appliance to the wall, locating onto the top coach bolts. Fit the two lower coach bolts and tighten all four securing bolts.

Measure the vertical distance between the top of the flue (Fig. 42) and the bottom of the flue terminal assembly (Fig. 41). The measurements should be taken from the outer diameter of the flue.

NOTE: Where this length does not match any standard combination of the extensions, extension can be cut to the required length (Fig. 44).

When cutting both inner and outer ducts of the extension, always cut on spigot side, and they must be de-burred.

## 5.8 REASSEMBLE BOILER AS PER (sect. 5.6.1)

### 5.8.1 Fitting valve pack

Remove plastic caps from boiler connection and fit flanged copper tail and valves as per Fig. 46 using washers provided.

## 5.9 GAS CONNECTION (Fig. 46)

5.9.1 A minimum working gas pressure of 20 mbar (6 in w.g.) must be available at the boiler inlet at full flow rate (37 mbar for propane, 29 mbar for butane).

5.9.2 Fit gas service cock to the boiler via the union nut and connect gas pipe. Do not overtighten and use another spanner as a counter force to avoid straining internal connections. Important consult (sect 4.5.1).

## 5.10 CENTRAL HEATING CONNECTION (Fig. 46)

5.10.1 Before any central heating connections are made to the boiler all system valves should be opened and the system thoroughly flushed out with cold water.

- Connect the central heating return pipe marked CHR.
- Connect the central heating flow pipe marked CHF.
- Pipe dimensions and positions are marked on template supplied and fig. 49/A.

## 5.13 ELECTRICAL CONNECTIONS

5.13.1 **IMPORTANT:** Electricity supply must be as specified in clause (sect. 4.10).

- When controls external to the appliance are required, design of the external electrical circuits should be undertaken by a competent person. In accordance with the IEE wiring regulations.

Factory fitted internal wiring must not be disturbed when wiring external controls.

- To gain access to the electrical box remove the front panel of the case as described in clauses (sect. 5.4.1) and the instrument panel as described in clauses (sect. 5.4.3).
- The terminals are easily visible on the front of the electronic control board (Fig. 48).
- Heat resistant flexible cable is fitted between the isolator and the terminal block<sup>2</sup> (24x0.2 mm) to BS 6500.

Make sure all wires to the appliance are routed away from sharp edges and hot surfaces.

The cable must be fastened with its cord anchorage and connected so that should the cable slip from the anchorage the current carrying conductors become taut before the earthing conductor.

Securely tighten all terminal screws and arrange the cable with slack between the cord anchorage and the terminal block.

**WARNING:** If the supply cord is damaged, it must be replaced by a service engineer (supply cord available from Ravenheat Manufacturing Ltd).

5.13.2 To gain access to the electrical connection remove the front panel of the case as described in clauses (sect. 5.4.1).


Unscrew the 2 screws that fasten the instrument panel (Fig. 23).

Lift the instrument panel in order to detach it from the sides, and lower it down by rotating it on its own hinges (Fig. 24-25). Make sure the casing and screws are put to one side in a safe place.

The terminal box is easily visible on the front of the control panel. Pull the electrical cover off to expose connection (Fig. 48).

5.13.3 Heat resistant flexible cable is fitted between the isolator and the terminal block. A 3 core

Fig. 46

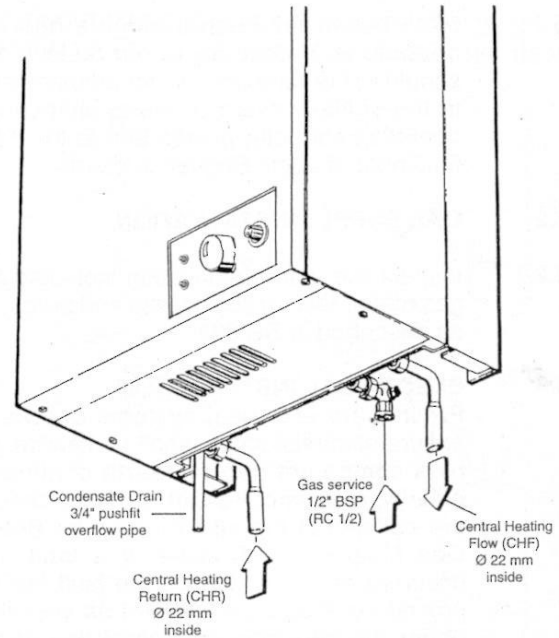

cable of 0.75 mm (24 x 0.2 mm) to BS6500. Make sure all wires to the appliance are routed away from the sharp edges and hot surfaces. The cable must be fastened with its cord anchorage and connected so that should the cable slip from the anchorage the current carrying conductors become taut before the earthing conductor. Securely tighten all terminal screws and arrange the cable with slack between the cord anchorage and the terminal block.


5.13.4 The pump must be connected directly to the boiler terminal's marked pump supply (Fig. 48). Any external controls must not interrupt this electrical connection.

5.13.5 To fit timer/programmer remove white link wire - 230 volts.

5.13.6 Check the electrical installation for earth continuity, short circuits, resistance to earth, correct polarity and fuse failure.

**WARNING:** if supply cord is damaged it must be replaced by a service engineer (supply cord available from Ravenheat Manufacturing Ltd).

Fig. 49A

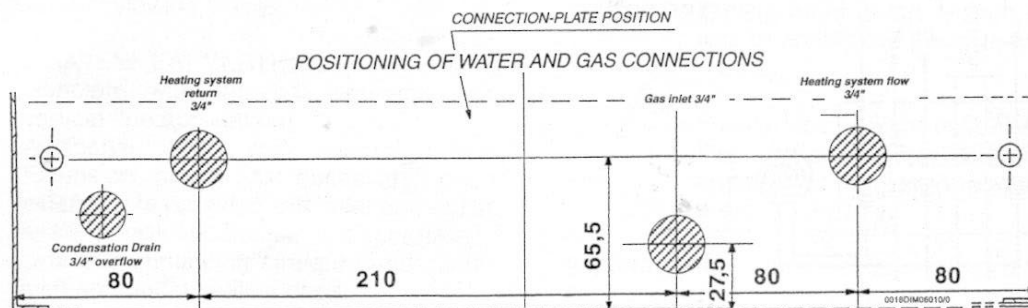



**SECTION 6 COMMISSIONING**

**6.1** Each boiler has been through a rigorous operational procedure at our factory and should not require any further adjustment, If in the unlikely event of the appliance not operating correctly, please turn to the Fault Finding and Logic Sequence charts.

**6.2 GAS SUPPLY INSTALLATION**

**6.2.1** Inspect the entire installation including the gas meter, test for soundness and purge, all as described in BS 6891.

**6.3 ELECTRICAL INSTALLATION**

Preliminary electrical systems checks to ensure electrical safety shall be carried out by a competent person (earth continuity, polarity, resistance to earth). Those checks are outlined in the <<Instructions for British Gas Multimeter,, Booklet. If a fault has occurred on the appliance the fault finding procedure should be followed as specified under the servicing section of this document.

**6.4 INITIAL FILLING OF THE SYSTEM**

- Unscrew the cap on automatic air release valve one full turn (leave open permanently).
- Close all air release taps on the heating system.
  - Gradually fill the heating system until water is heard to flow.
  - Starting with the lowest radiator open each air release tap in turn. Close it only when clear water, free of bubbles, flows out. In the same way release air from any high points in the pipework.
  - Inspect the system for water soundness and remedy any leaks discovered.

**6.5 SETTING THE SYSTEM DESIGN PRESSURE**

The design pressure must be a min 1 bar and max 1.5 bar. These figures are read off the pressure gauge.

- The actual reading should ideally be 1 bar + the height in metres to the highest point of the system above the base of the appliance (up to a max of 1,5 bar).  
N.B.: The safety valve is set to lift a 3 bars (30 mt/42.5 psig).
- To lower the system pressure to the required value remove drain point (Fig. 93) or drain on the heating circuit.

**6.7 LIGHTING THE BOILER (Fig. 50)**

Before lighting the main burner make sure that the heating circuit flow and return valves are open.

- If external controls are installed (e.g. timeclock and thermostat) make sure that they call for heat.
- Turn on main switch 1 (Fig. 50).

**6.7.1 LIGHTING THE BOILER (Fig. 50)**

Before lighting the main burner make sure that any heating circuit flow and return valves are open.

- If external controls are installed (e.g. timeclock and thermostat) make sure that they call for heat.
- Turn on main switch 1 (Fig. 50).
- Turn control thermostat up to its maximum setting.
- Now the main burner should turn on. With leak detection fluid test for gas soundness of all gas components and joints.
- See paragraph 6.14 for regulating the heating circuit thermostat.


**CHECK GAS MAINS PRESSURE (Fig. 51)**

Fit a gas pressure gauge on pressure inlet 77 on the gas valve, after releasing the seal screw.

Check the gas mains pressure with boiler operating.


Check with the Local Gas supplier if the pressure differs significantly from 20 mbar (natural gas), 37 mbar (G31) and 29 mbar (G30).

Fig. 48

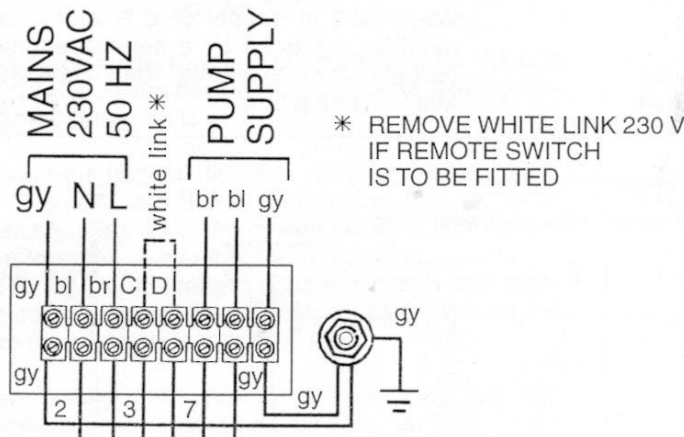


**INSTRUMENT PANEL**

Fig. 50

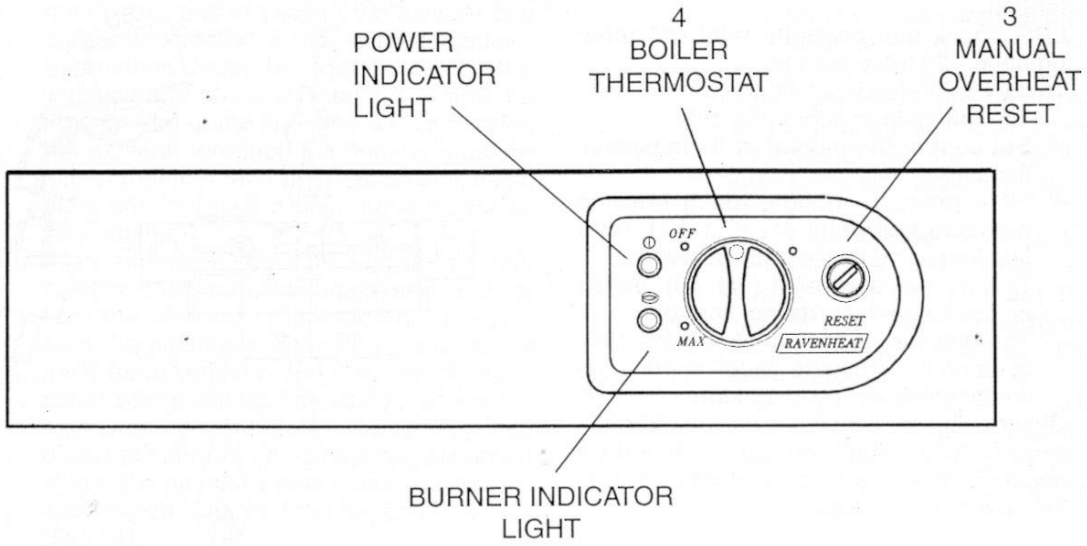

**GAS VALVE**

Fig. 51

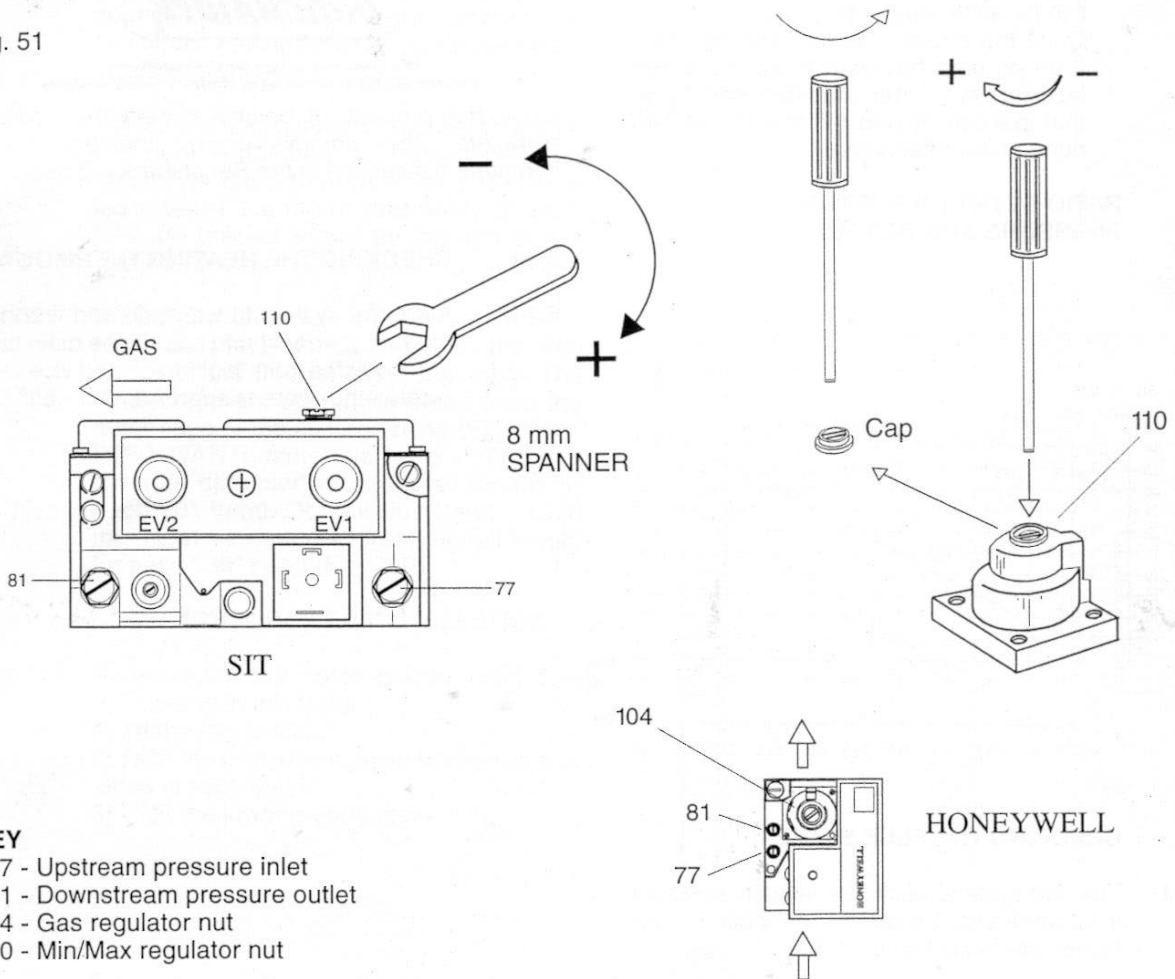

6.8 CHECK THE GAS PRESSURE AT THE BURNER

Now check the gas pressure at the burner is equal to  $10.5 \pm 0.5$  mbar ( $4.2 \pm 0.2$  in wg.) for CSI.

LPG check gas pressure inlet (37 mbar propane - 29 mbar butane).

To do this proceed as follows:

- Turn off main switch 1 (Fig. 50).
- Set control thermostat at its maximum setting.
- Fit a pressure gauge, using hose to pressure test point 81, (Fig. 51). After first loosening its close-off screw.
- Turn on mains switch 1 (Fig. 50). Switch on timer and any external controls.
- The pressure indicated after a few seconds on the pressure gauge is the maximum operating gas pressure.


Observe the pre light flame which will light a second before main burner. It should be about 20 mm long (Fig. 52B) end envelop the spark electrode tip.

6.10 ADJUSTING BURNER SETTING PRESSURE

- With the boiler operating use a spanner (Honeywell a screw driver) to turn the nut 110 clockwise to increase pressure and anticlockwise to decrease pressure.
- To obtain the desired heat value establish pressure as per (Fig. 52).
- Once the pressure is established, mark it up on data badge with adhesive red label/arrow burner pressure setting so that this can be referred to and checked during future servicing.

RATIO BETWEEN BURNER PRESSURE AND OUTPUT



Fig. 52

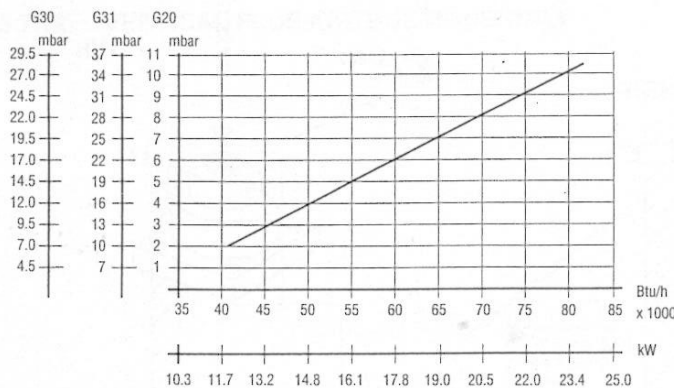

6.13 CHECKING THE FLUE SYSTEM

- 6.13.1 The flue system should be visually checked for soundness. Check all connections and fixings are secure and tight.

Fig. 52B

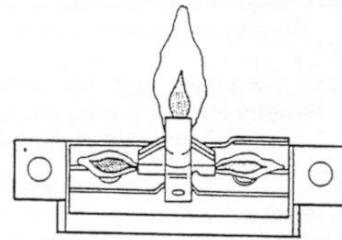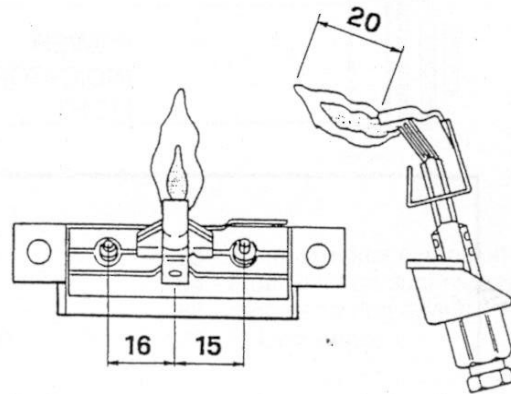

The code of practice for the installation, commissioning & servicing of central heating systems


Once the process of commissioning the boiler is complete, the commissioning engineer MUST complete his section in the Benchmark log book.

6.14 CHECKING THE HEATING THERMOSTAT

- 6.14.1 Allow the system to warm up and then turn the C.H. thermostat to ensure the main burner modulates from "high" to off and vice versa (scale range covers approx. 62° C - 85° C).

# EXPLODED DIAGRAM OF BOILER BODY

Fig. 53A

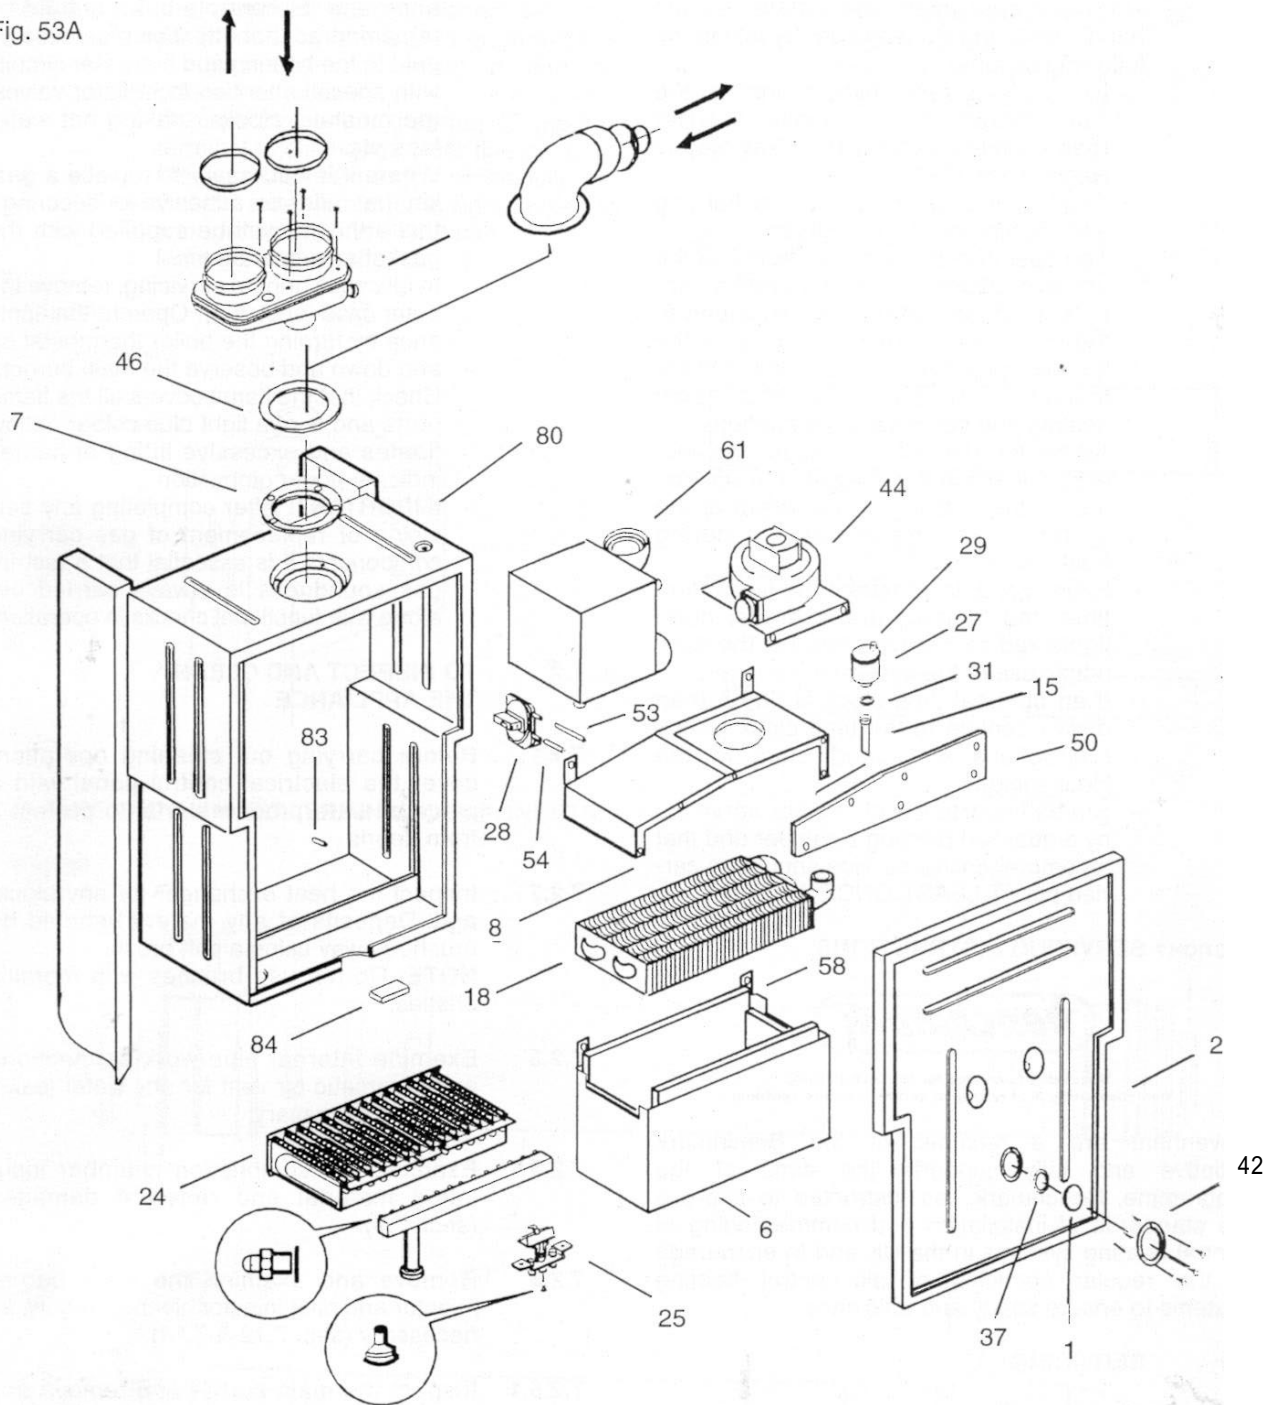

## KEY

- |                           |                                  |                                |
|---------------------------|----------------------------------|--------------------------------|
| 1 - Window                | 27 - Auto air vent valve         | 53 - Connection tube           |
| 2 - Plenum chamber cover  | 28 - Pressure switch             | 54 - Connection tube           |
| 6 - Combustion chamber    | 29 - Seal                        | 58 - Ceramic insulation        |
| 7 - Flue restriction ring | 31 - Seal                        | 61 - Condensing heat exchanger |
| 8 - Flue gas exhaust hood | 37 - Window seal                 | 80 - Plenum chamber            |
| 15 - Connection pipe      | 42 - Window clamp ring           | 83 - Burner centering pin      |
| 18 - Heat exchanger       | 44 - Fan                         | 84 - Seal                      |
| 24 - Main burner          | 46 - Header gasket               |                                |
| 25 - Pilot burner         | 50 - Flue gas exhaust hood cover |                                |

## 6.16 HANDING OVER TO THE USER

- 6.16.1 After completion of installation and commissioning of the system, the installer should hand over to the Householder by taking the following actions:
- Hand the "User's Instructions" to the Householder and explain His/Her responsibilities under the "Gas Safety Regulations 1996".
  - Explain and demonstrate the lighting and shutting down procedures.
  - The operation of the boiler including the use and adjustment of ALL system controls which should be fully explained to the Householder. This then ensures the greatest possible fuel economy consistent with household requirements of both heating and hot water consumptions. Advise the User of the precautions necessary to prevent damage to the system, and to the building, in the event of the system remaining inoperative during frost conditions.
  - Explain and demonstrate the function of time and temperature controls, neon lights radiator valves etc. for the economic use of the system.
  - If an optional time clock is fitted, then draw attention to the time clock User's instructions and hand them to the Householder.
  - Stress importance of regular servicing by a qualified Heating Engineer and that a comprehensive service should be carried out AT LEAST ONCE A YEAR.

## SECTION 7 SERVICING INSTRUCTIONS

Ravenheat are a member of the Benchmark initiative and fully supports the aims of the programme. Benchmark has instructed to improve the standards of installation and commissioning of central heating systems in the UK and to encourage in the regular servicing of all central heating systems to ensure safety and efficiency,

### 7.1 SERVICING

- 7.1.1 To ensure continued efficient operation of the appliance it is necessary to carry out servicing and cleaning at regular intervals. The frequency of cleaning will depend upon the particular installation conditions and usage but in general, once per year should be adequate.

#### **WARNING**

Before the start of any servicing or replacement of components always isolate electricity supply to the appliance and always turn off the appliance gas supply at the gas service cock.

Data badge position - lower left hand sub frame.

- The following notes apply to the appliance and its controls but it should be remembered that attention must also be paid to the heating and hot water circuits with special attention to radiator valves, thermostats, clocks, leaking hot water taps etc.
- Where it is necessary to replace a gasket that relies on adhesive for securing - this adhesive will be supplied with the gasket as a spare item.
- In all cases prior to servicing, remove the outer case (sect. 5.4). Operate the appliance by turning the boiler thermostat up and down and observe the main burner.
- Check that the flame covers all the flame ports and is of a light blue colour. Yellow flames and excessive lifting of flames indicate poor combustion.
- **IMPORTANT:** After completing any servicing or replacement of gas carrying components it is essential that a test for gas soundness is always carried out along with functional checks in operation.

### 7.2 TO INSPECT AND CLEAN THE APPLIANCE

- 7.2.1 Before carrying out cleaning operation, cover the electrical control panel with a piece of waterproof material to protect it from debris.
- 7.2.2 Inspect the heat exchanger for any blockage. Deposits of any material should be brushed away using a soft brush.  
NOTE: Do not use brushes with metallic bristles.
- 7.2.3 Examine internal pipe-work connections and automatic air vent for any water leaks. Rectify if necessary.
- 7.2.4 Examine the combustion chamber insulating material and renew if damaged (sect. 7.9).
- 7.2.5 Remove and examine the main burner injector and pilot injector clean or renew, as necessary (sec. 7.12 & 7.14).
- 7.2.5.1 Inspect the main burner and remove any deposit with a soft brush. Check the electrodes for damage or deterioration, clean or renew as necessary. Ensure that the spark gaps are correct to dimensions specified in sec. 7.15.
- 7.2.6 Inspect the secondary condensate heat exchanger. Deposits can be cleared by removing and flushing out the exchanger. Inspect the siphonic condensate trap for a blockage. Any deposits should be flushed out (Fig. 90).

- 7.2.6.1** To remove condensate trap (sect. 5.4). Pull forward the trap (Fig. 90). Unscrew the earth wire, and the sensor. Replace in reverse order.
- 7.2.7** Examine the fan for any mechanical damage, check to ensure free running of the fan wheel. Clean the wheel if necessary with a soft brush. Check sealing gasket and renew if damaged (sect. 7.6).
- 7.2.8** Examine flue duct and flue hood and ensure that there is no obstruction. Examine the gasket at the entry into the flue duct.
- 7.2.9** It is essential that a good seal is made at the outlet to the fan, renew this gasket if there is any sign of damage or deterioration.
- 7.3 TO REMOVE/REPLACE THE FRONT PANEL OF THE CASING (Fig. 19 & 20)**
- 7.3.1** Remove the 4 screws that secure the upper part of the front panel of the casing and carefully remove.
- 7.4 TO REMOVE/REPLACE THE COMBUSTION CHAMBER COVER**
- 7.4.1** Remove the front casing panel (sect. 7.3).
- 7.4.2** Unscrew all the screws that fasten the cover to the chamber body and put them into a container so that they don't get lost.
- 7.4.3** Detach the cover, being careful not to damage the seal.
- 7.4.4** Reassemble in reverse order. Ensure good seal of cover when replacing.
- 7.6 TO REMOVE/REPLACE THE FAN ASSEMBLY (Fig. 58)**
- 7.6.1** Remove front casing (sect. 7.3). Remove combustion chamber front cover as in (sect. 7.4).
- 7.6.2** Disconnect the electrical connections from the fan motor.
- 7.6.4** Support the fan and remove the two fixing screws and bracket from the front of the flue hood. Carefully withdraw from condensing heat exchanger then from the appliance. Place in a safe place until required. Reassemble in reverse order. Ensure wires are connected correctly (Fig. 94).
- 7.6.5 TO REMOVE/REPLACE CONDENSING HEAT EXCHANGER FIG. 54-55**
- 7.6.5.1** Remove front casing (sect. 7.3). Remove combustion chamber front cover as in (sect. 7.4). Remove lower grating by unscrewing the two screws (Fig. 21).
- 7.6.5.2** Close the ON/OFF valves for the heating. Drain the heating system from the drain point mounted system (Fig. 93).
- 7.6.5.3** Remove the fan (sect.7.6).
- 7.6.5.4** Disconnect 4 unions for the heating water pipelines (Fig. 54) and remove the two short pipes.
- 7.6.5.5** Remove screw holding heat exchanger to chamber. Disconnect condensing discharge pipe by pulling off the pushfit connector at top rear of boiler (Fig. 54).
- 7.6.5.6** Pull the heat exchanger down and slightly forward until it comes out of the connection from chamber (Fig. 55).
- 7.6.5.7** Replace in reverse order. Taking care to refit discharge pipe at rear.
- IMPORTANT:** When replacing heat exchanger new seals must be used.
- 7.7 TO REMOVE/REPLACE THE FLUE HOOD (FIG. 60)**
- 7.7.1** Remove front casing (sect. 7.3). Remove combustion chamber front cover as in (sect. 7.4).
- 7.7.2** Remove the fan (sect. 7.6).
- 7.7.2.1** Remove condensing heat exchanger (sect. 7.6.5)
- 7.7.3** Remove the three screws on the front that fasten hood to the combustion chamber.
- 7.7.4** Remove the two screws at the rear of hood.
- 7.7.6** Replace in reverse order.
- 7.8 TO REMOVE THE HEAT EXCHANGER (FIG. 62-63-64)**
- 7.8.1** Remove front casing (sect 7.3). Remove combustion chamber front cover as in (sect. 7.4). Remove the lower grating (sect.5.4.2). Lower the instrument panel (sect. 5.4.3 & 4).
- 7.8.2** Remove the two sides of the casing by slightly lifting them and sliding them towards the top of the appliance, to release them from their upper suspension hooks.
- 7.8.4** Remove the fan (sect. 7.6).
- 7.8.5** Remove condensing heat exchanger (sect. 7.6.5).
- 7.8.6** Remove the flue hood (sect. 7.7).
- 7.8.8** Remove the automatic air vent (Fig. 92).

- 7.8.9 Disconnect unions for two heating (right side of boiler) water pipelines (Fig. 62).
- 7.8.10 Unscrew the rings that fasten the heat exchanger to the combustion chamber.
- 7.8.11 Remove the two side insulation panels at top of heat exchanger (Fig. 63).
- 7.8.12 Pull the heat exchanger up until its flow connections come out from the combustion chamber and then remove it (Fig. 64).
- 7.8.13 Replace in reverse order. Ensure correct wire position (Fig. 94)

**IMPORTANT:** When replacing a heat exchanger new seals must be used.

**7.9 TO REMOVE/REPLACE COMBUSTION CHAMBER INSULATION PANELS (Fig. 63).**

- 7.9.1 Remove casing front panel (sect. 7.3). Remove combustion chamber front cover (sect. 7.4).
- 7.9.2 Remove fan (sect. 7.6)
- 7.9.3 Remove condensing heat exchanger (sect. 7.6.5).
- 7.9.4 Remove the flue hood (sect. 7.7)

Fig. 54


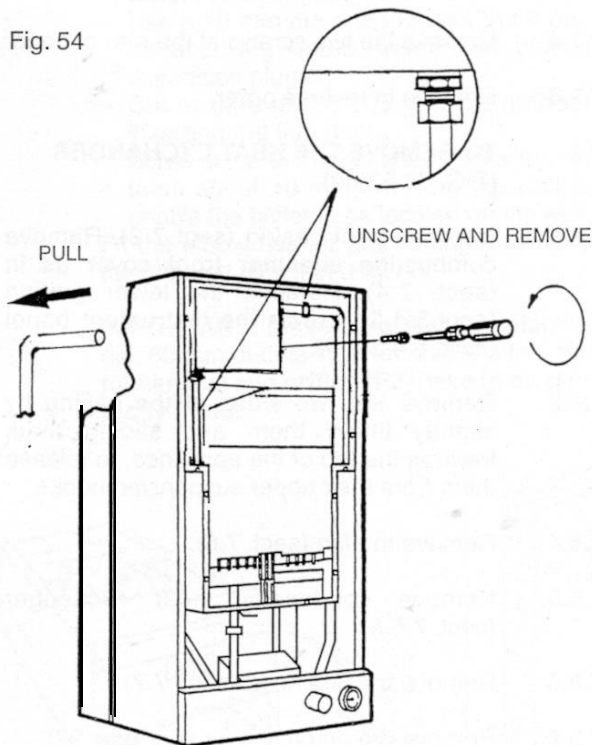


Fig. 55

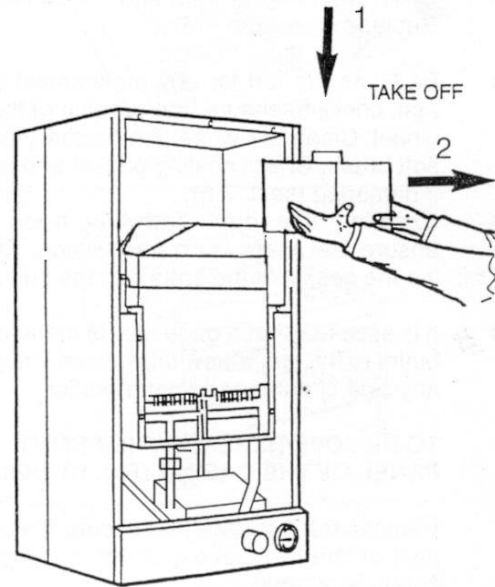

- 7.9.5 Remove main burner (sect. 7.15). Remove top insulation pieces at sides. Remove 2 screws securing combustion chamber to rear of boiler. Lower chamber carefully remove all insulation panels.
- 7.9.6 Replace in reverse order.
- 7.10 TO REPLACE THE ELECTRODE (Fig. 66)
- 7.10.1 Remove front casing (sect. 7.3). Remove combustion chamber front cover (sect. 7.4).

Fig. 58



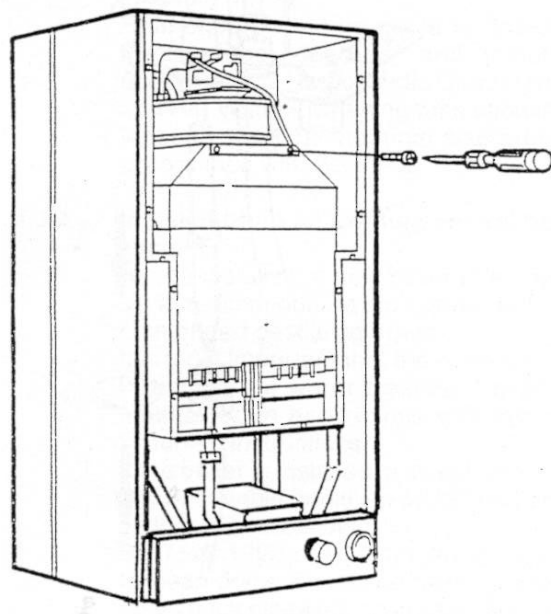


Fig. 60

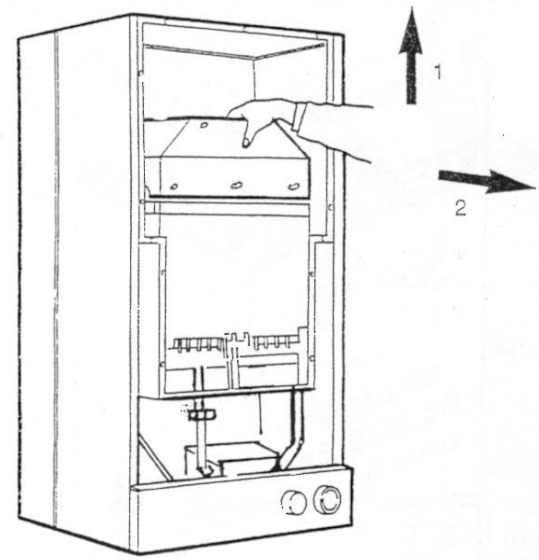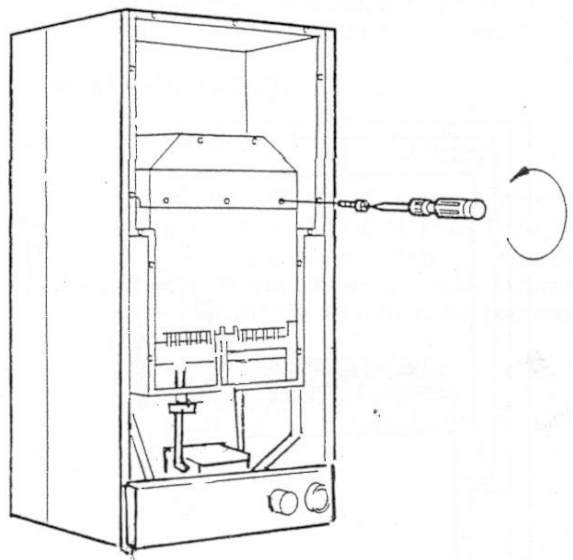

TAKE OFF

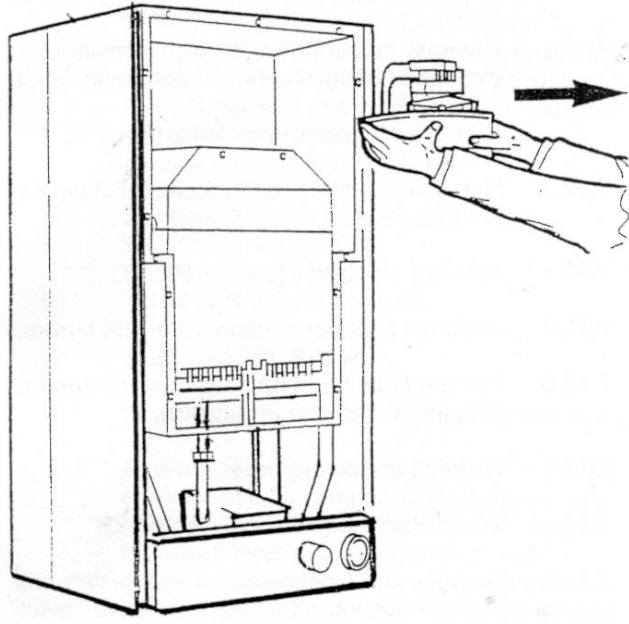


Fig. 62

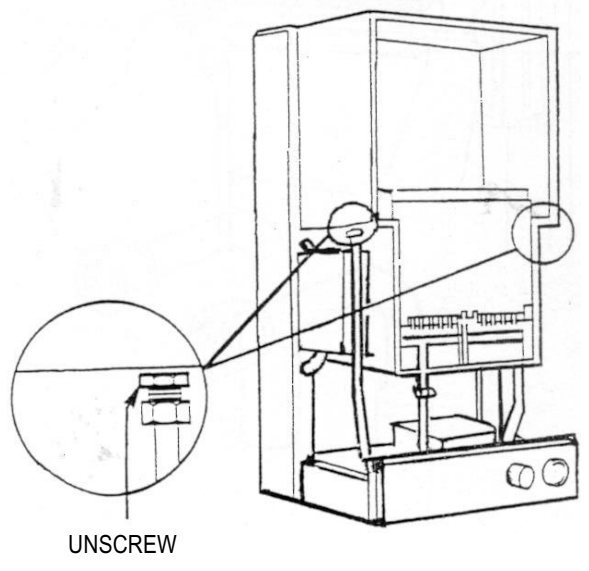




Fig. 63


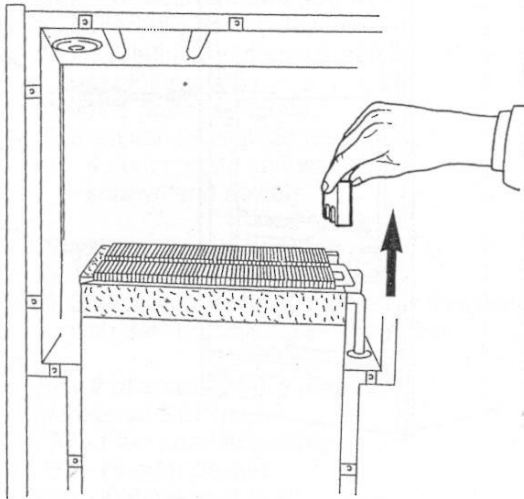


Fig. 66

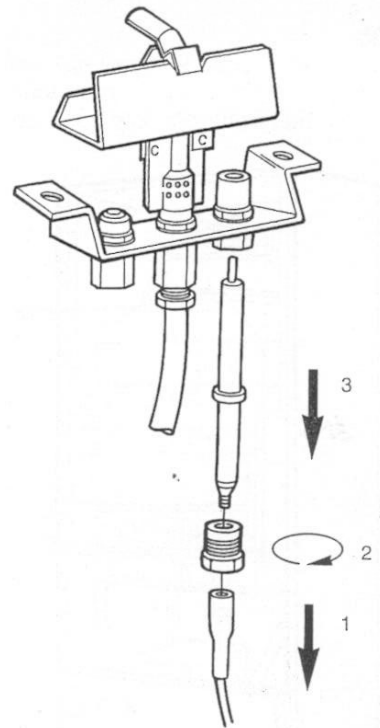

7.10.2 Detach the wire from electrode and then unscrew the nut that secures it to the pilot burner assembly and remove.

7.10.3 Replace with new electrode in reverse order.

7.12 **TO REPLACE THE PILOT INJECTOR (Fig. 68)**

7.12.1 Remove the front panel of the casing and the combustion chamber front cover (sect. 7.3 & 7.4). Remove the lower sect. 5.4.2 (Fig. 21).

7.12.2 Release the fitting that secures pilot pipe at the gas valve.

7.12.3 Remove electrode (sect. 7.10).

7.12.4 Unscrew pilot connection from pilot burner

7.12.5 Pull the aluminium tube downwards and the injector should come out by itself.

7.12.6 Replace in reverse order

7.13 **TO REPLACE THE PILOT BURNER**


7.13.1 Remove the front panel of the casing and the combustion chamber front cover (sect. 7.3 & 7.4).

7.13.2 Remove the electrode and pilot injector (sect. 7.10 and sect. 7.12).

7.13.4 Remove the two screws securing pilot burner to main burner (Fig. 69).

7.13.5 Replace in reverse order.

Fig. 64

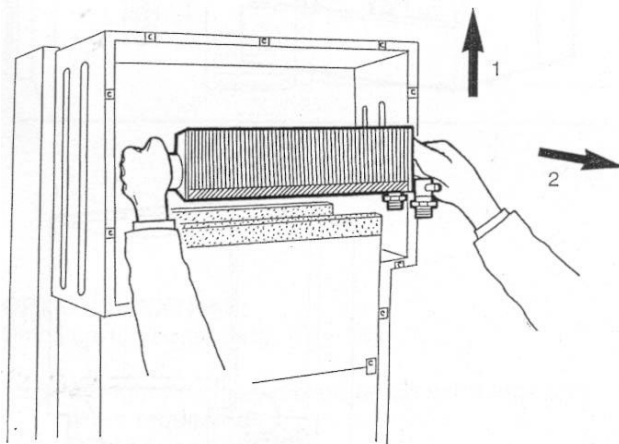

7.14 TO REMOVE/REPLACE THE MAIN INJECTORS

- 7.14.1 Remove the front panel of the casing and the combustion chamber front cover (sect. 7.3 & 4). Remove the pilot burner assembly as described in sect. 7.13.
- 7.14.2 Unscrew the union (Fig. 70).
- 7.14.3 Unscrew the 4 screws securing the injector manifold to the burner (Fig. 71).
- 7.14.4 Pull the manifold up and out from the combustion chamber (Fig. 72).
- 7.14.5 Unscrew and replace the injectors and their seals (Fig. 73).
- 7.14.6 Replace in reverse order.
- 7.14.7 Relocate the grommet, sealing the gas supply pipe to the casing taking care not to damage it. Replace if necessary.

Fig. 68

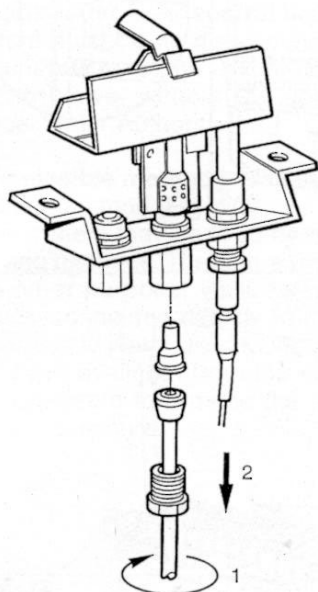


Fig. 69

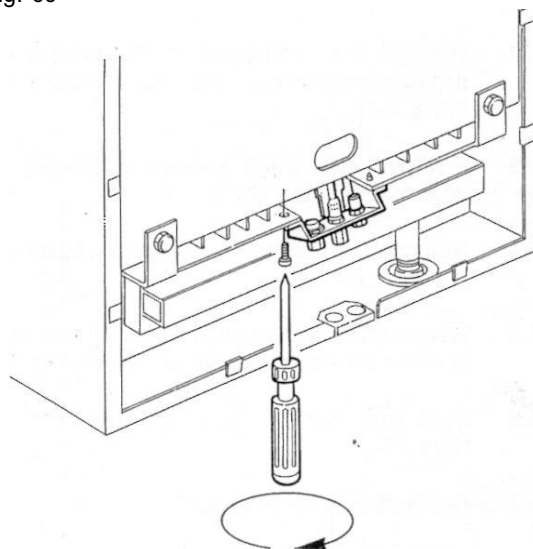


Fig. 70


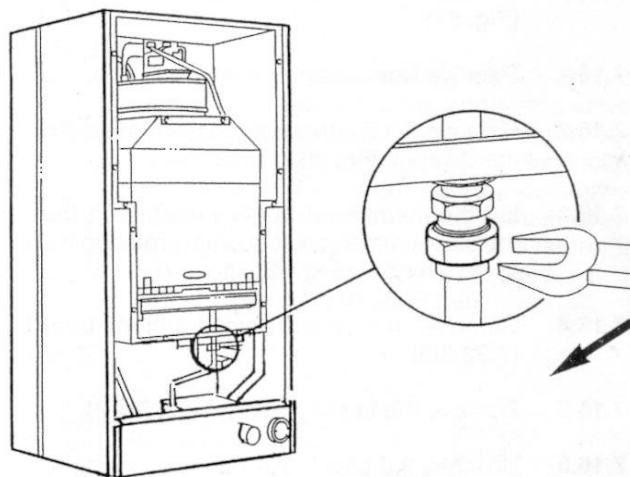


Fig. 71

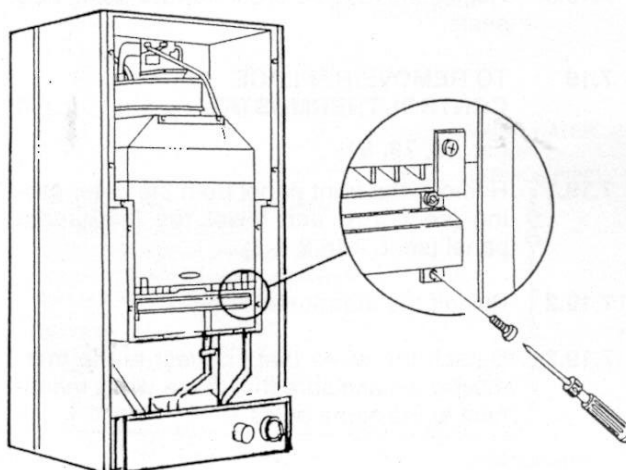

7.15 TO REMOVE/REPLACE THE MAIN BURNER

- 7.15.1 Remove the front panel of the casing and the combustion chamber front cover (sect. 7.3 & 7.4).
- 7.15.2 Remove the pilot burner assembly as described in sect. 7.13.
- 7.15.4 Remove the injectors manifold as described in sect. 7.14.
- 7.15.5 Remove the two screws securing the main burner to the combustion chamber (Fig. 74).
- 7.15.6 Pull the burner forward and remove (Fig. 75).
- 7.15.7 Replace in reverse order.

**IMPORTANT:** When refitting the burner make sure that the pins at the rear of the combustion chamber locate into the slots made on the rear of the burner.

7.16 TO REMOVE/REPLACE THE GAS VALVE (Fig. 51)

- 7.16.1 Remove front casing panel (sect. 7.3).
- 7.16.2 Remove the 2 screws that fasten the instrument panel (Fig. 23).
- 7.16.3 Lift the instrument panel to detach it from the sides, and lower it down by rotating it on its own hinges (Fig. 25).
- 7.16.4 Remove the electronic ignition board (7.32.2/3).
- 7.16.5 Remove the lower grating (sect. 5.4.2)
- 7.16.6 Unscrew the pilot burner tube connection.
- 7.16.7 Remove the eight screws (four per side) that connect the gas valve to the gas pipelines and then remove it from its seat.
- 7.16.6 Replace in reverse order, always using new seals.

7.19 TO REMOVE/REPLACE CONTROL THERMOSTAT (Fig. 78, 79, 81)

- 7.19.1 Remove the front panel from the outer casing (sect. 7.3) and lower the instrument panel (sect. 7.16.2 & 3).
- 7.19.2 Pull off the thermostat knob.
- 7.19.3 Detach the wires that connect to the thermostat - make sure that these wires reconnect to the same poles.

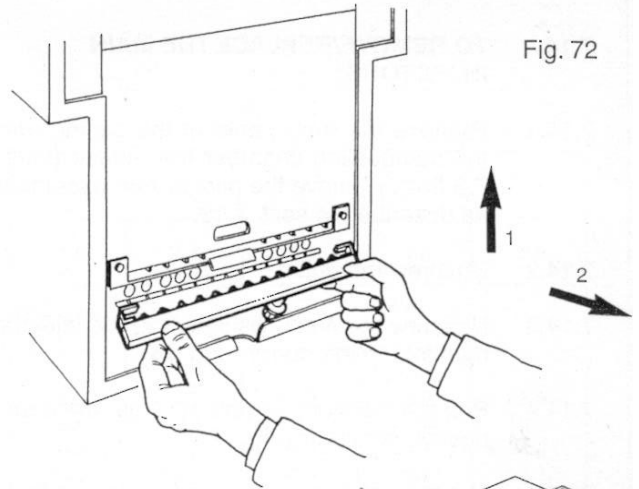


Fig. 72

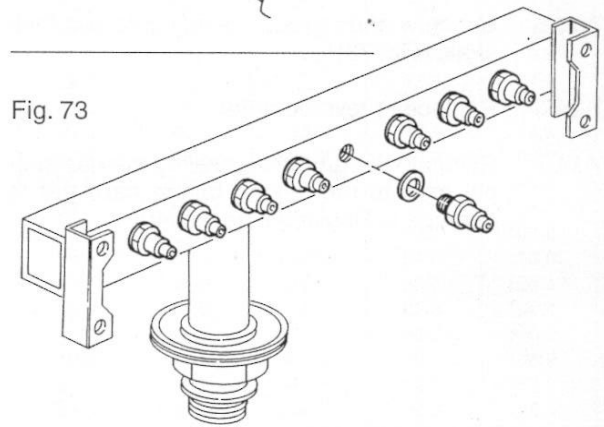


Fig. 73

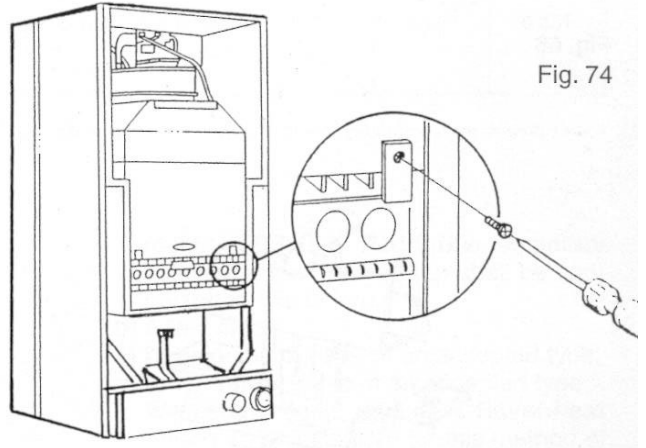


Fig. 74

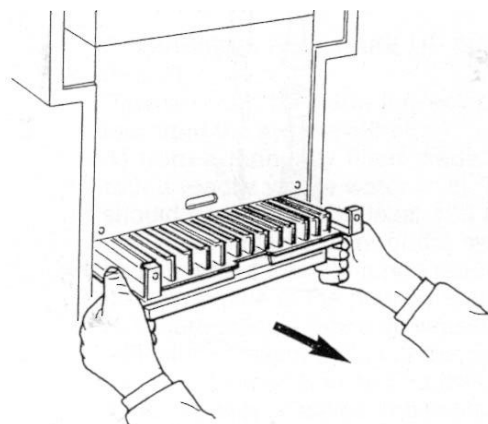


Fig. 75

7.19.4 Unscrew the two screws that fasten the thermostat to the instrument panel.

7.19.5 Remove the split pin and pull the thermostat from its pocket (Fig. E1).

7.19.6 Replace in reverse order.

7.22 TO REMOVE/REPLACE THE OVERHEAT THERMOSTAT (Fig. 78,79)

7.22.1 Remove the front panel from the outer casing (sect. 7.3) and lower the instrument panel (sect. 7.16.2 & 3).

7.22.2 Remove lower grill and right side of the casing (sect.5.4.2 & 5).

7.22.3 Unscrew the plastic cover and locknut that fastens the overheat thermostat and remove it.

7.22.4 Remove the three wires that connect to the overheat thermostat making sure that these wires will subsequently be reconnected to the same poles.

7.22.5 Remove the split pin and pull the thermostat sensor from its pocket.

7.22.7 Replace in reverse order.

7.24 TO REMOVE/REPLACE THE DIFFERENTIAL PRESSURE SWITCH (Fig. 87).

7.24.1 Remove the front panel from the outer casing and the combustion chamber front cover (sect. 7.3 & 4).

7.24.2 Detach the wires that connect to the pressure switch, make sure that these wires are later reconnected to the same poles (Fig. 94).

7.24.3 Unscrew the two screws that fasten the pressure switch to the back of combustion chamber.

7.24.4 Remove the two silicone tubes

7.24.5 Ensure tubes are connected correctly (Fig. 87) avoiding kinks.

7.24.6 Replace in reverse order ensuring that the - tapping is connected to the tube terminating inside the case and the + tapping is connected to the tube terminating at flue ring (Fig. 87 and 94).

Fig. 76

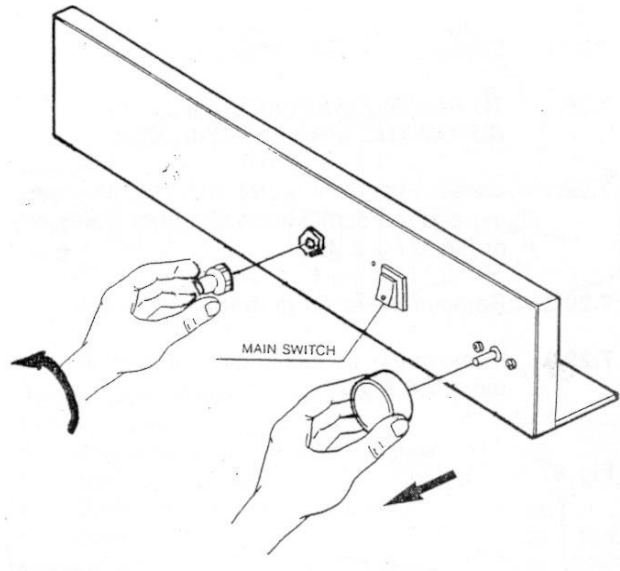


Fig. 79


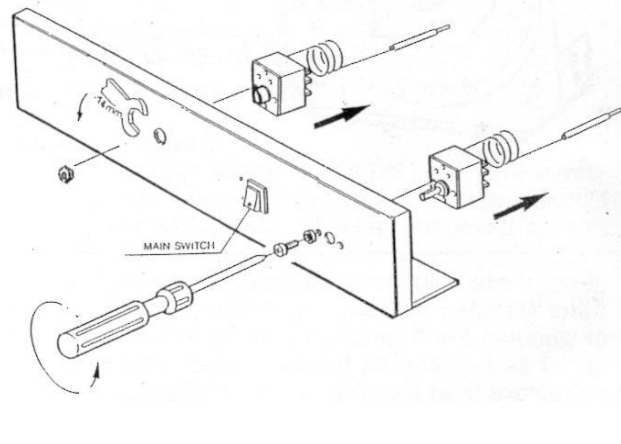


Fig. 81

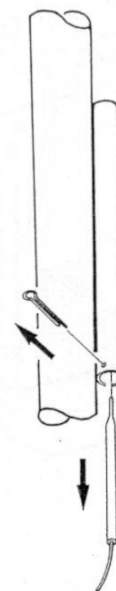

- 7.27.5 Undo the nut and withdraw the sensor (Fig. 81) from its pocket.
- 7.27.6 Replace in reverse order.
- 7.29 TO REMOVE/REPLACE THE AUTOMATIC AIR VENT (Fig. 92)
- 7.29.1 Remove the front panel from the outer casing and the combustion chamber front cover (sect. 7.3 & 4).
- 7.29.2 Remove the lower grating (sect. 5.4.2).
- 7.29.3 Remove the fan assembly and the flue hood (sect. 7.6 & 7.7).

- 7.32 TO REMOVE/REPLACE THE IGNITION BOARD
- 7.32.1 Remove front casing (sect. 7.3) lower the instrument panel (sect. 7.16.2 & 3),.
- 7.32.2 Remove the screw from the ignition box cover.
- 7.32.3 Detach the ignition box from its base on the gas valve.
- 7.32.4 Remove the PCB cover and detach the connectors from the board.
- 7.32.5 Replace in reverse order (ensure all electrical connections are made correctly).

Fig. 87

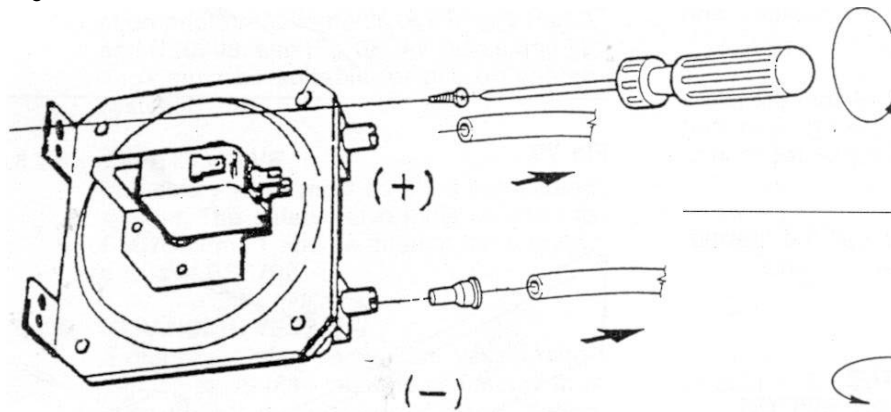


Fig. 92



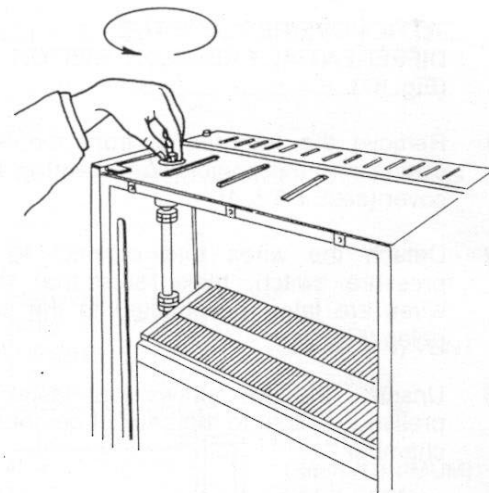



Fig. 90

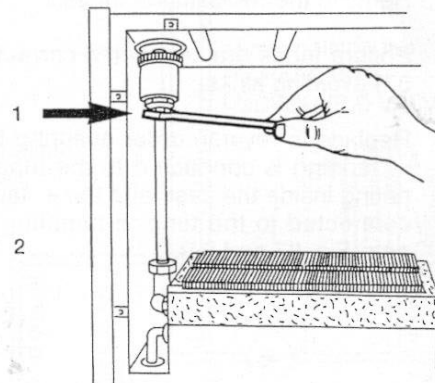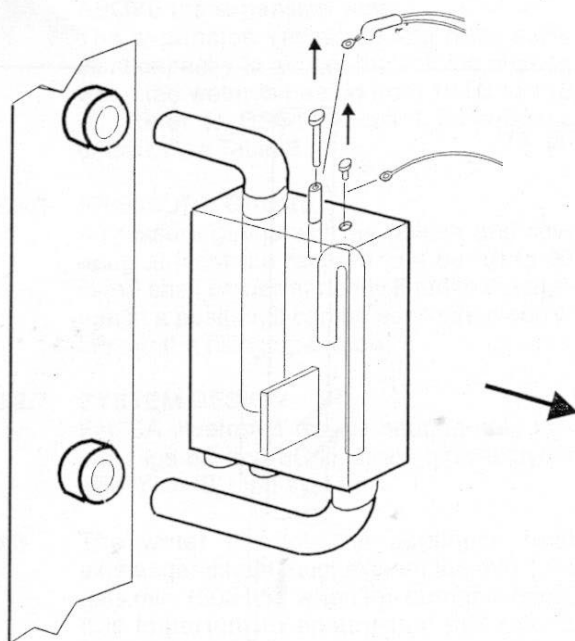


SECTION 8 FAULT FINDING

Stat to maximum


Ensure external controls calling for heat (Room Stat/Time Clock/TRV)

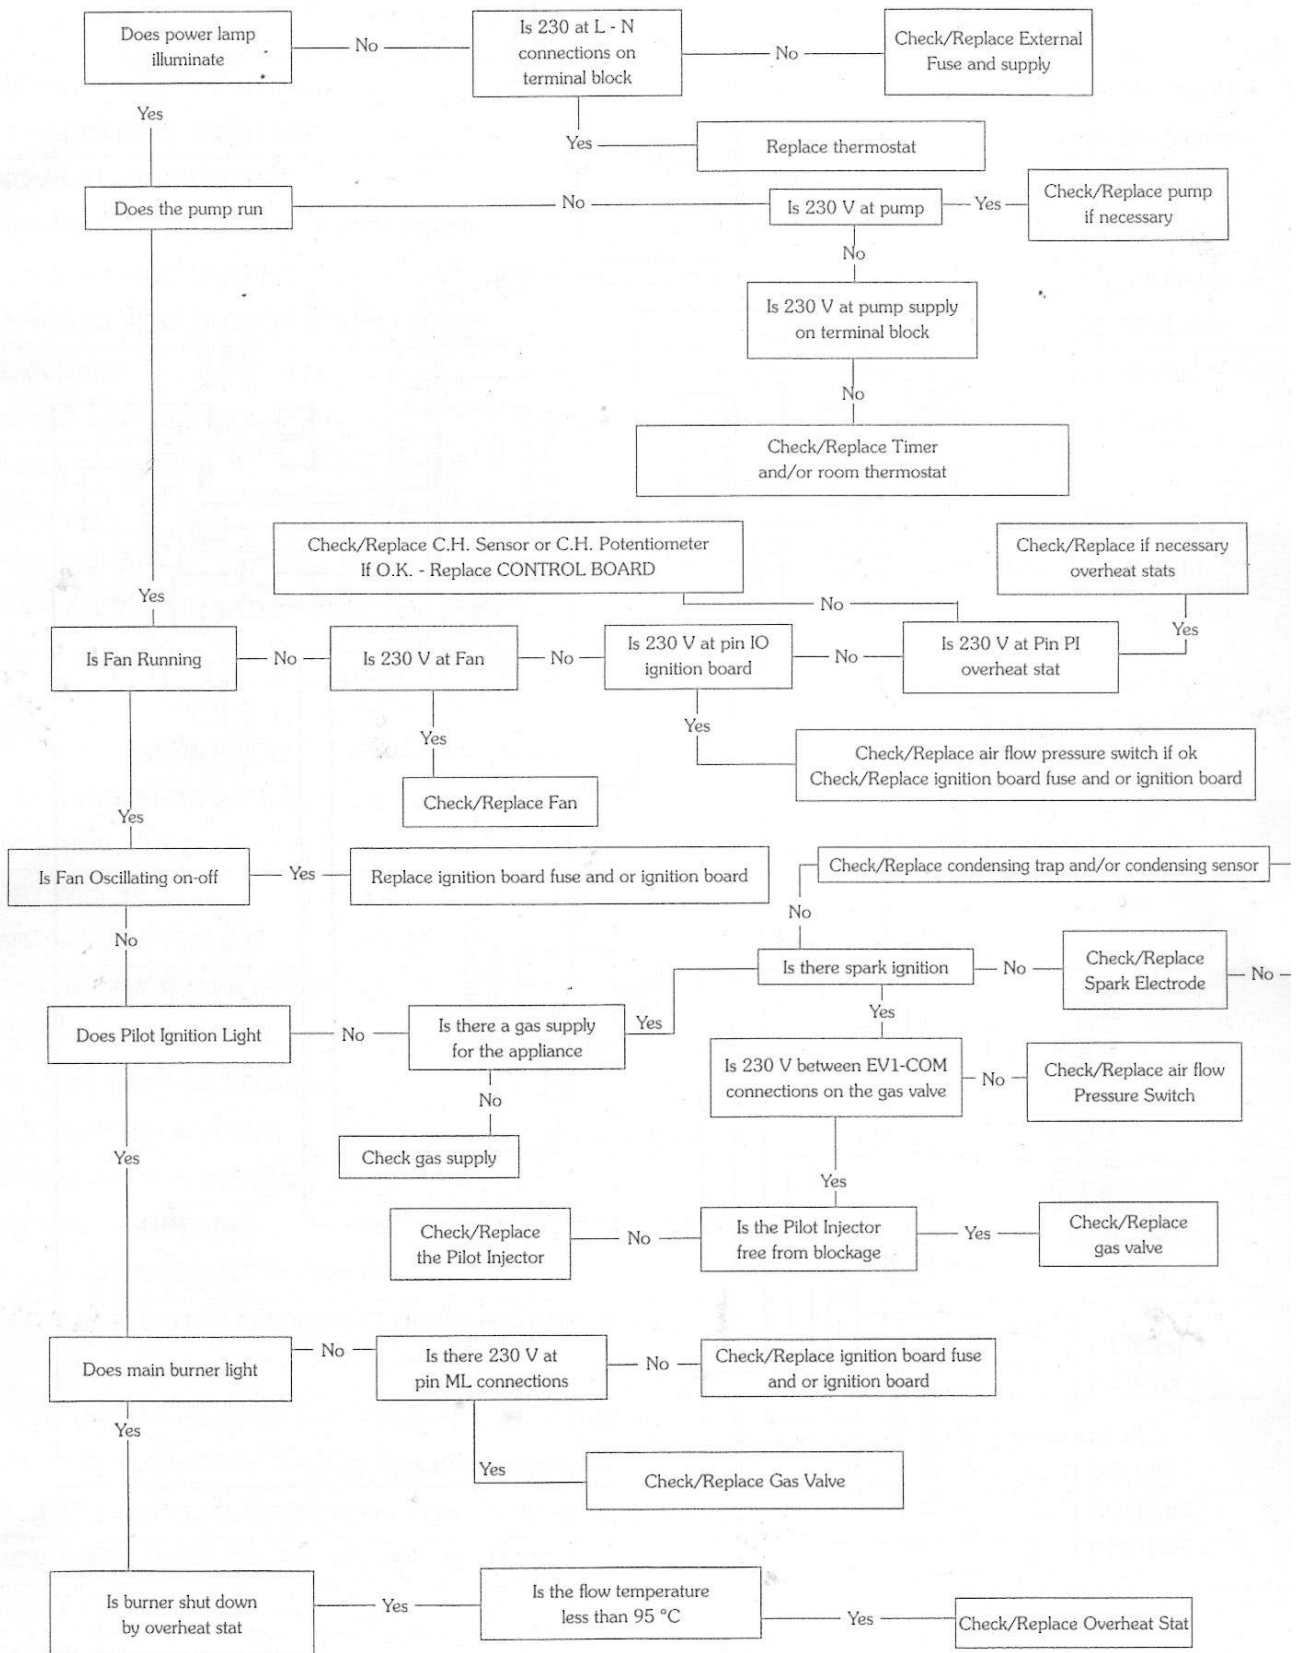

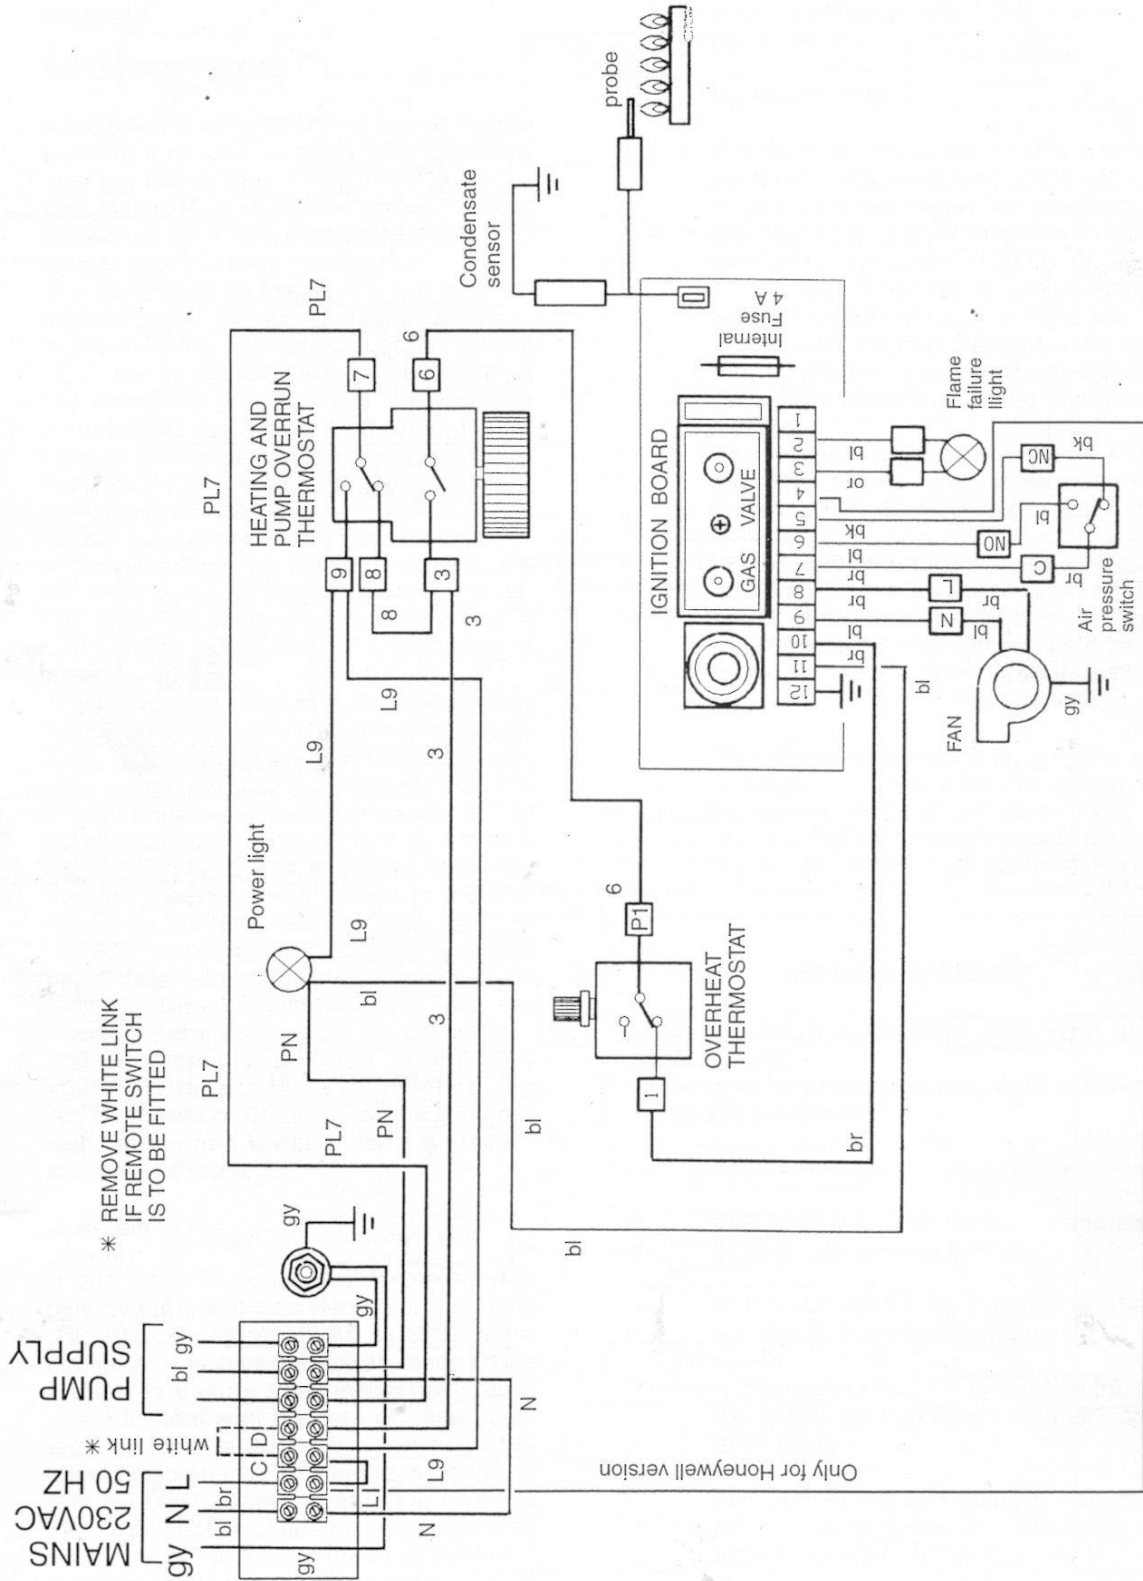

**FUNCTIONAL  
FLOW DIAGRAM**  
General Layout

Fig. 95

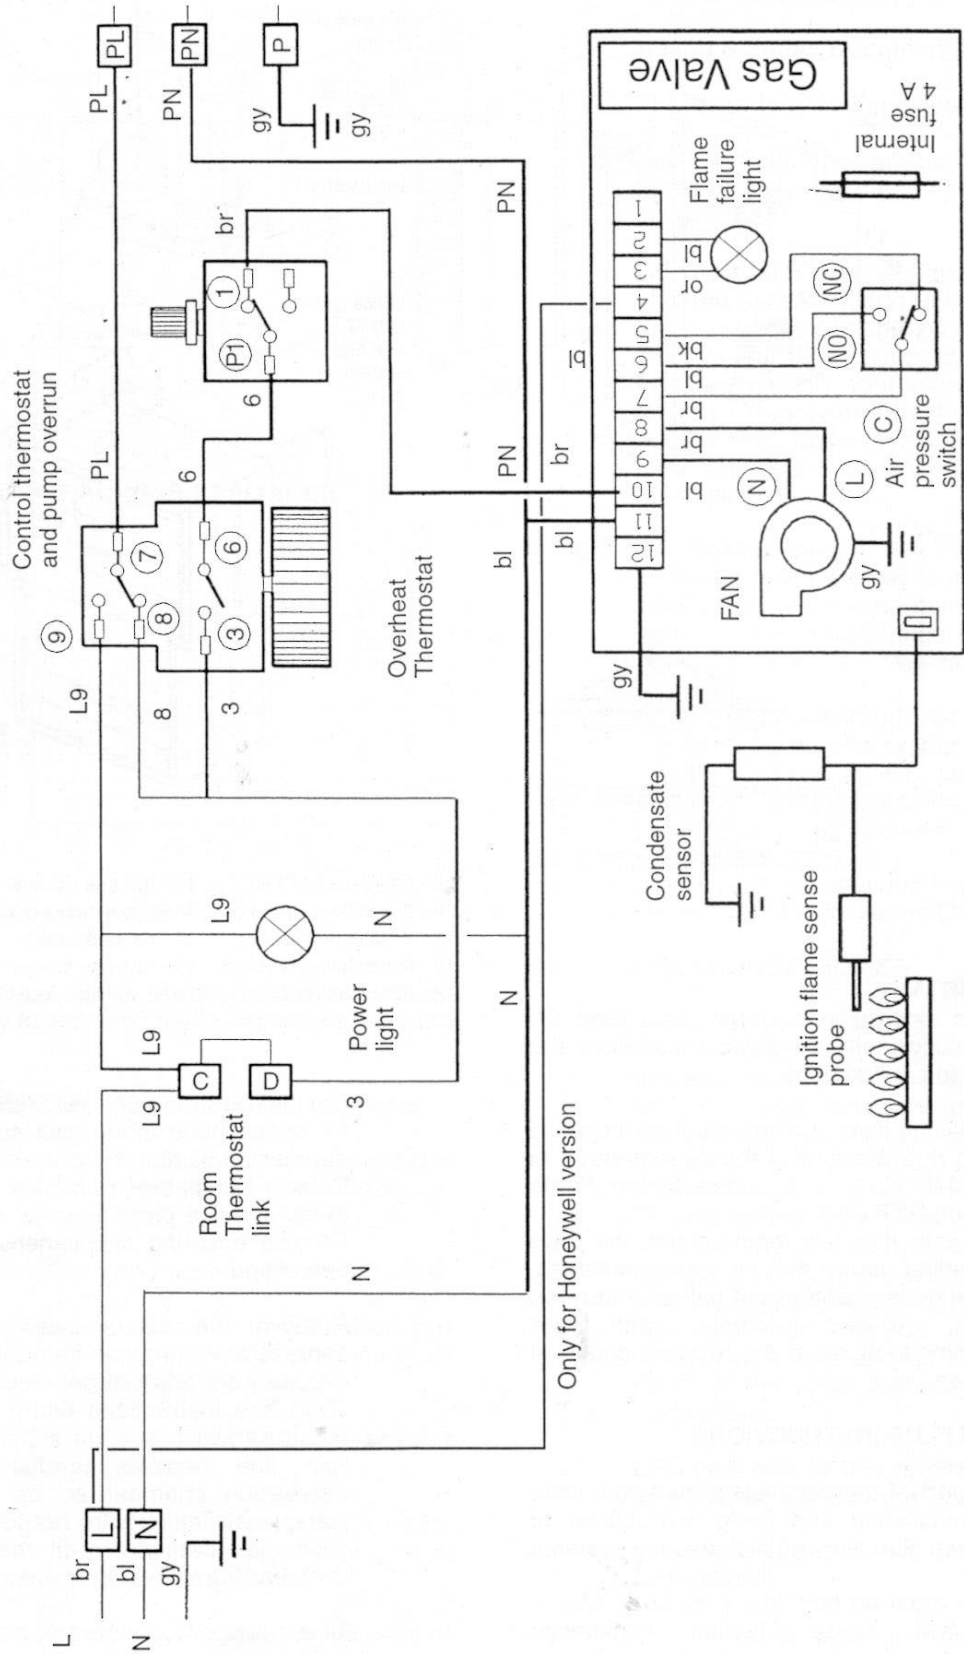



8.0 INSTALLATION INSTRUCTIONS FOR TWIN FLUE PIPE (ECCENTRIC FLUE DUCT SYSTEM)



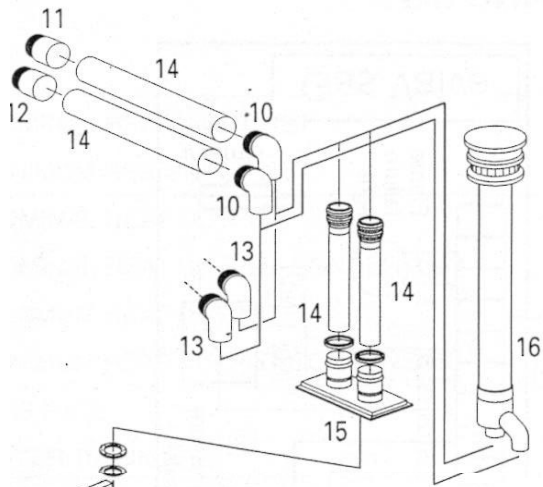


Fig. 1.8

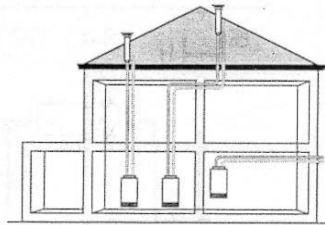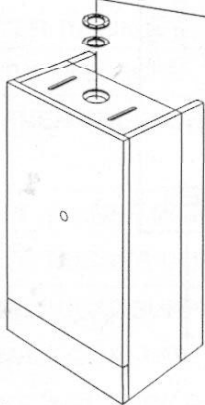

**IMPORTANT**

These instructions must be read in conjunction with the main installation and servicing instructions.


As with all flues the kits must be installed taking due account of the current issue of BS 5440 parts 1 & 2 and timber frame housing REF DM2.

Also note that the requirements will vary depending upon the kit being installed. Guidance is provided but unless otherwise stated, always comply with the recommendations of the relevant codes of practice.

8.1 TWIN FLUE INSTRUCTIONS

This part of the installation manual covers the installation and fixing instructions of the twin flue eccentric flue duct systems only.

When ordering twin flue it must be stated for CSI range. Typical installation procedures are illustrated by drawings.

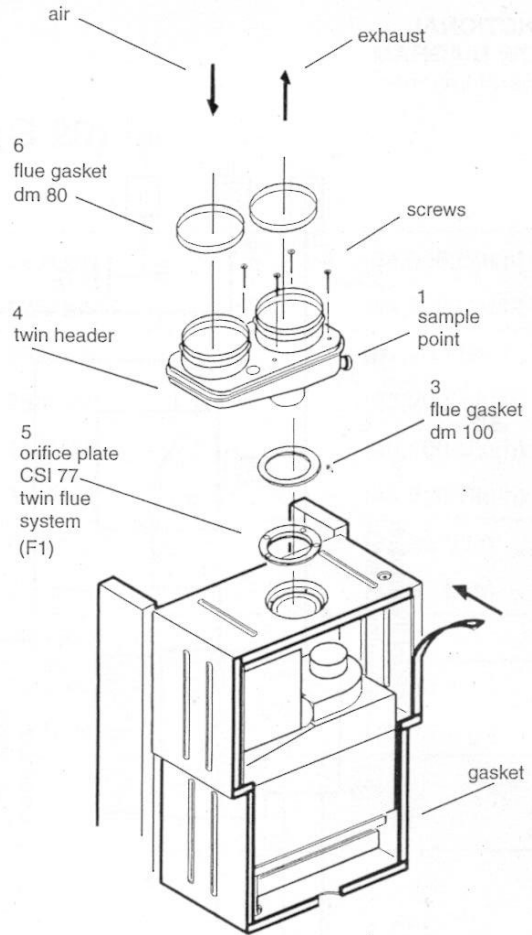

- |                            |   |
|----------------------------|---|
| 10 - air intake bend 90°   | 13 - 45° flue exhaust bend                |
| 10 - flue exhaust bend 90° | 14 - flue exhaust duct                    |
| 11 - air inlet terminal    | 14 - air intake duct                      |
| 12 - flue exhaust terminal | 15 - two-way flue gas header              |
| 13 - 45° air intake bend   | 16 - vertical eccentric flue exhaust duct |

Supplied with the CSI twin flue header is a F1 orifice plate along with supplementary depression seal.

Before fixing the twin flue system the existing orifice plate must be replaced with F1 also ensuring supplementary seal has been fitted.

Remove the 13 screws securing the depression front panel item 2 figure 53A to expose front edge of depression chamber. (Twin flue instructions figure 1 adjacent). Using adhesive sponge supplied with CSI twin flue header, carefully attach to depression chamber so as to create a softer seal. Taking care not to damage the new seal, carefully re-fit the depression chamber front cover in reverse order.

Take out the 4 temporarily fitted securing screws, lifting our the gasket and orifice plate disconnecting it from the venturi tube.

Discard this orifice plate and re-fit the F1 orifice plate ensuring that the venturi tube has been re-fitted, making sure this is securely located into the locating peg.

Locate the sealing washer fixing the twin flue header as illustrated making sure that the inner aluminium exhaust locates firmly in the outlet spigot. Make sure that the screws are satisfactorily located through the gasket seal.

Locate the 2 x 80 mm 'O' rings in the twin flue header.

Figures show the versatility of this flueing system. Measurements and bends must be calculated correctly so as not to oversize maximum flue lengths.


All located 'O' rings must be lubricated with a silicone grease to ensure easy, snug fit.

NOTE: Exhaust flue must slope 2" down towards the boiler 35 mm fall per metre.

### Spacing Clips


Spacing clips are available on request should they be required.

NOTE: for eccentric vertical flue a 125 mm (5 in) diameter flashing plate will be required.

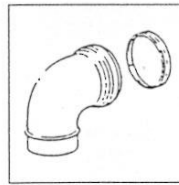


90° M/F bend consisting of.

90° elbow with 'O' ring side F  
80 mm dia 'O' ring

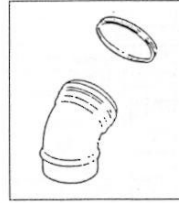


135° M/F bend consisting of.

135° elbow with 'O' ring side F  
80 mm dia 'O' ring

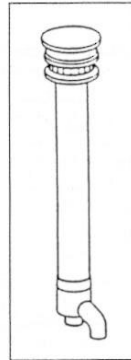

Vertical eccentric flue exhaust duct

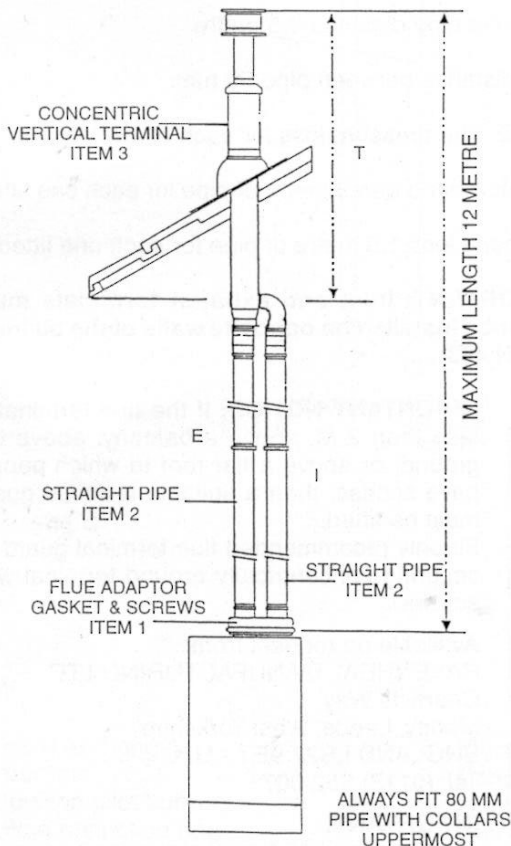

E = EXHAUST  
I = INLET  
T = TERMINAL

Exhaust/suction system with concentric pipes for flat or sloping roofs. Extensions with two separate pipes.

Maximum distance = I + E + T = 2 Metre + 2 Metre + 1 Metre = 12 Metre maximum (pipe + terminal).

Minimum distance D = T = 2 metre.

Exhaust terminal must not be cut

NOTE: The pressure loss for each elbow fitted is:

90° slow bend less 3 metre of pipe for each one fitted.

135° bend less 1.5 metre of pipe for each one fitted.

NOTE:

If bends are used in the exhaust flue then horizontal sections must be avoided and there must be a 2" slope towards the boiler 35 mm fall per metre.

**IMPORTANT:** See Fig. 42 for terminal clearances.

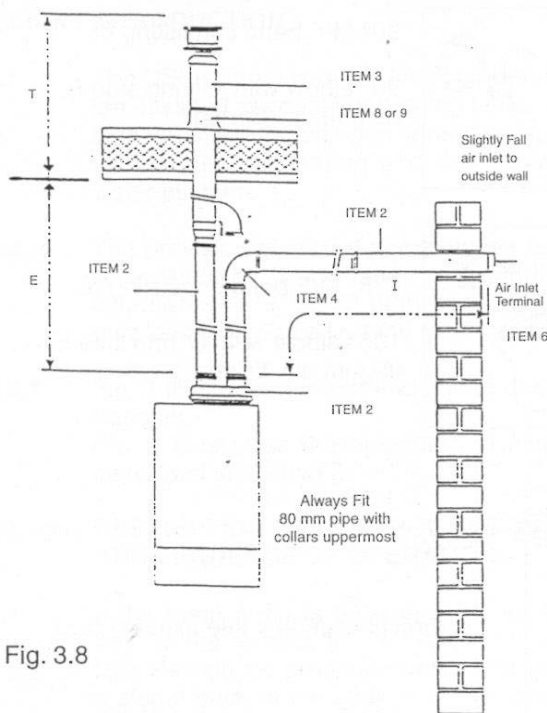


Fig. 3.8

Exhaust/suction system with two separate rated 80 dia. Pipes - exhaust on flat or sloping roof, suction from vertical wall.

Maximum distance  $D = I + E + T =$  Total exhaust/inlet pipe = 20 metre.

Exhaust terminal must not be cut.

Min inlet pipe distance = 0.5 metre

NOTE: The pressure loss for each elbow is:

90° slow bend less 3 metre of pipe for each one fitted.

45° bend less 1.5 metre of pipe for each one fitted.

Minimum total length = 2 metre.

NOTE: Exhaust flue must slope 2° down towards the boiler 35 mm fall per metre.

**IMPORTANT:**  
see Fig. 6 and 42 for terminal clearances

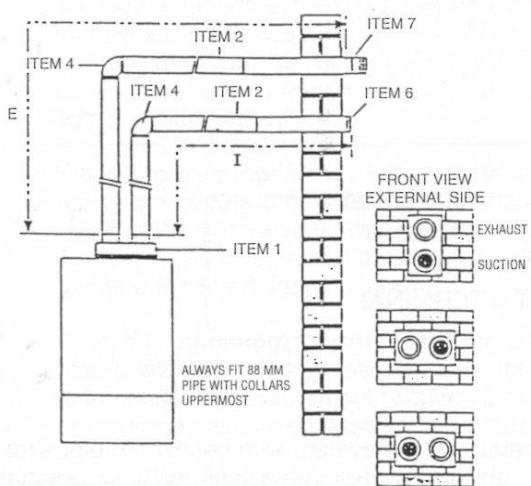


Fig. 4.6

Exhaust/suction system with two separate pipes through a single vertical wall.

Maximum distance  $D = I + E =$  Total exhaust/inlet pipe 18 metre.

Minimum distance  $D = I + E = 1.5$  metre.

Min inlet pipe distance 0.5 metre.

Min distance between pipe 50 mm.

NOTE: The pressure loss for each elbow fitted is:

90° slow bend less 3 metre of pipe for each one fitted.

45° bend less 1.5 metre of pipe for each one fitted.

**IMPORTANT: inlet and exhaust terminals must never be installed on opposite walls of the building (PrEN 483).**

ITEM DESCRIPTION

- 1 CSI flue adaptor gasket and screws
- 2 Straight pipe
- 3 Eccentric vertical terminal
- 4 90° slow bend
- 5 45° bend
- 6 Air inlet terminal (plastic) 60 mm
- 7 Exhaust terminal (stainless steel) 80 mm
- 8 Pitch roof slate
- 9 Flat roof slate
- 10 Twin flue pipe socket seal 60 mm

PART NO.

- 30005
- 30001
- 30003
- 30009
- 30011
- 30007

**IMPORTANT NOTICE:** If the flue terminates less than 2 M. above a balcony, above the ground, or above a flat roof to which people have access, then a suitable terminal guard must be fitted.


Fit only recommended flue terminal guard by securing concentrically around terminal with screws.

Available on request from:  
RAVENHEAT MANUFACTURING LTD  
Chartists Way  
Morley, Leeds, West Yorkshire  
ENGLAND LS27 9ET - U.K.  
Tel. (0113) 252 007

**IMPORTANT:**  
see Fig. 6 and 42 for terminal clearances.

SECTION 10

EXPLODED PARTS DIAGRAM

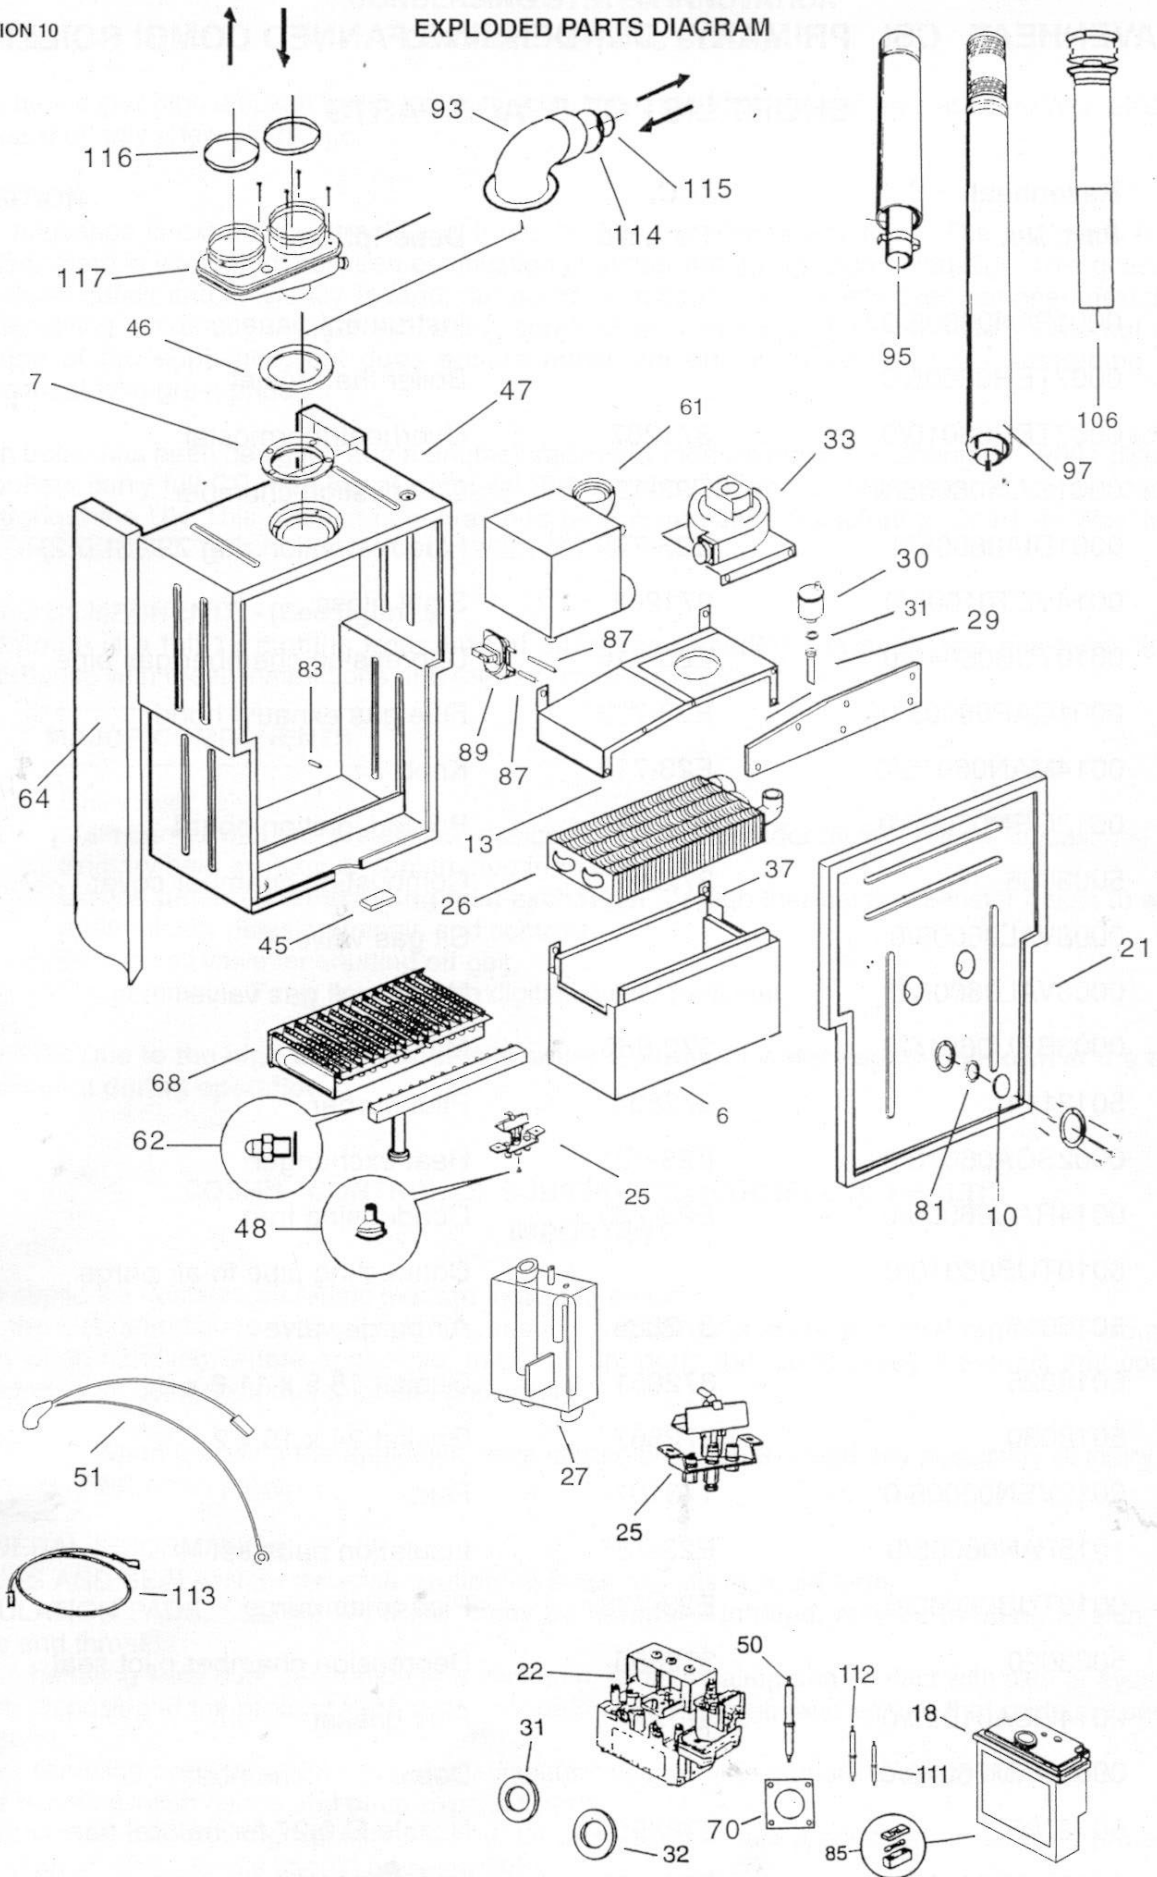

# RAVENHEAT CSI PRIMARY CONDENSING FANNED COMBI BOILER

## SHORT LIST OF SPARE PARTS

Pos.	Ravenheat Part. No.	G.C. Part. No.	Description
1	0001 PAN06005/0		Instrument panel
4	0007TER06005/0		Boiler thermostat
5	0007TER03010/0	371267	Overheat thermostat
6	0001 CAM06005/0	E23-732	Combustion chamber
7	0001 DIA06005/0	E23-730	Flue restriction ring 79CSI (F2)
10	0014VET01005/0	371268	Sight glass
11	001 0TUB05040/0	E23-716	Depression chamber gas pipe
13	0001 CAP06005/0	E23-733	Flue gas exhaust hood
17	0014MAN06015/0	E23-718	Knob
18	0012GEN05005/0	E24-630	Printed ignition board
21	5003066	372849	Combustion chamber cover
22	0008VAL06005/0		Sit gas valve
22.1	0008VAL06006/0		Honeywell gas valve
24	0003BRU06015/0	372-866	Main burner
25	5012114	372894	Pilot burner
26	0002SCA06010/0	E23-731	Heat exchanger
27	0014RAC06005/0	E23-735	Condensing trap
29	001 0TUB0601 0/0		Connecting pipe to air purge
30	5015015	372888	Air purge valve
31	5018025	37285 1	Gasket 18.5 x 11.6 x 2
32	5018030	372867	Gasket 24 x 15 x 2
33	0012VEN03005/0	173101	Fan
37	1015PAN06005/0	E23-737	Insulation pads set
38	0010TUB06060/0	E23-738	Pipe to air purge
45	5023020	372855	Depression chamber pilot seal
46	0014GUA01020/0	371277	Flue gasket
47	0001 CAM0601 0/0		Depression chamber
48	5012096	372856	Nozzle Ø 0,27 for natural gas
48.1	0003UGE01005/0	E02-129	Nozzle DM 0.22 x 1 LPG

<b>Pos.</b>	<b>Ravenheat Part. No.</b>	<b>G.C. Part. No.</b>	<b>Description</b>
50	5021050	<b>372892</b>	<b>Ignition electrode</b>
51	0012CAVO6005/0	E23-739	Cable for electrode
61	0002SCA06005/0	E23-740	Condensing heat exchanger
62	0003UGE03005/0	371297	Nozzle Ø 1,25 for natural gas
62.1	0003UGE01011/0	E23-755	Nozzle DM 0.75 LPG
64	0001TEL06010/0		Frame
68	0003BRU06015/0		Main burner natural gas
68.1	0003BRU06002/0		Main burner LPG
70	0013GUA03035/0	371273	Gasket 32 x 32 x 2 gas valve
81	0013GUA01045/0	371274	Gasket 48 x 42 x 1
85	0012FUS05020/0	E23-724	Internal fuse 4A
87	5021312	372875	Nylon tubes from pressure switch
89	0005PRE05015/0	E24-629	Pressure switch
93	0019CUR06005/0	E23-750	Elbow header
95	0019PRO06005/0	E23-751	Flue extension duct complete
97	0019TER06005/0	E23-752	Flue duct and terminal complete
106	0019TER06010/0	E23-753	Vertical Flue Terminal Complete
110	0001 MAN06005/0		Bottom panel
111	0011RIV06006/0		Earth electrode
112	0011RIV06005/0		Condensate blockage
113	0012CAVO6015/0		Earth wire
114	0014GUA06010/0		Flue gasket dm 100
115	0014GUA06005/0		Flue gasket dm 60
116	0014GUA06015/0		Flue gasket dm 80
117	0019SDO06005/0		Twin header



**Chartists Way, Morley, Leeds, LS27 9ET.**

**Telephone: (0113) 252 7007**

**Tfax: (0113) 238 0229**

Ravenheat reserves the right to make changes and improvements in our products which may affect the accuracy of the information contained in this leaflet.